

24 JULY 2001  
EXPRESS MAIL  
EF 082128482 US

1/3 60980038-2

FIG. 1A

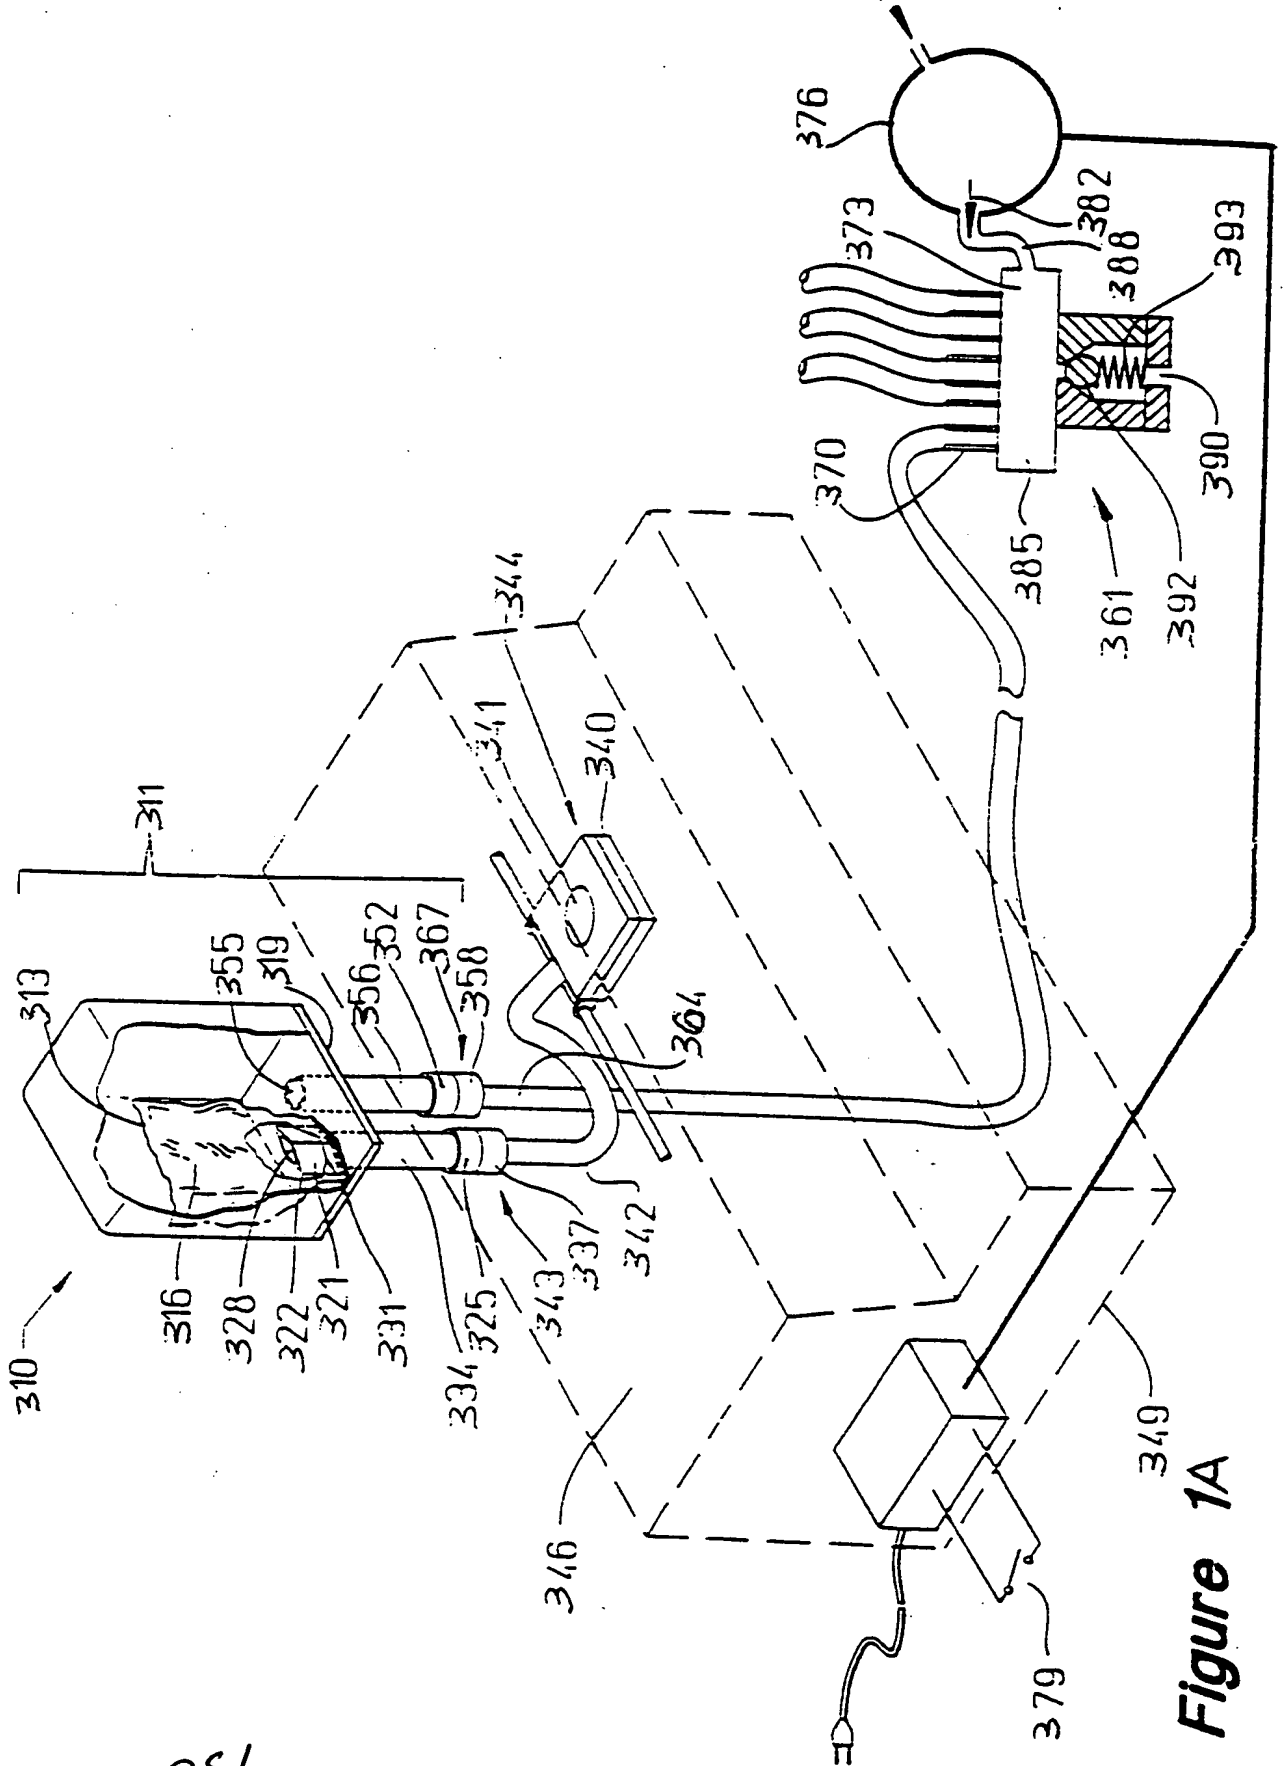 


Figure 1A

1/30 60980038-2

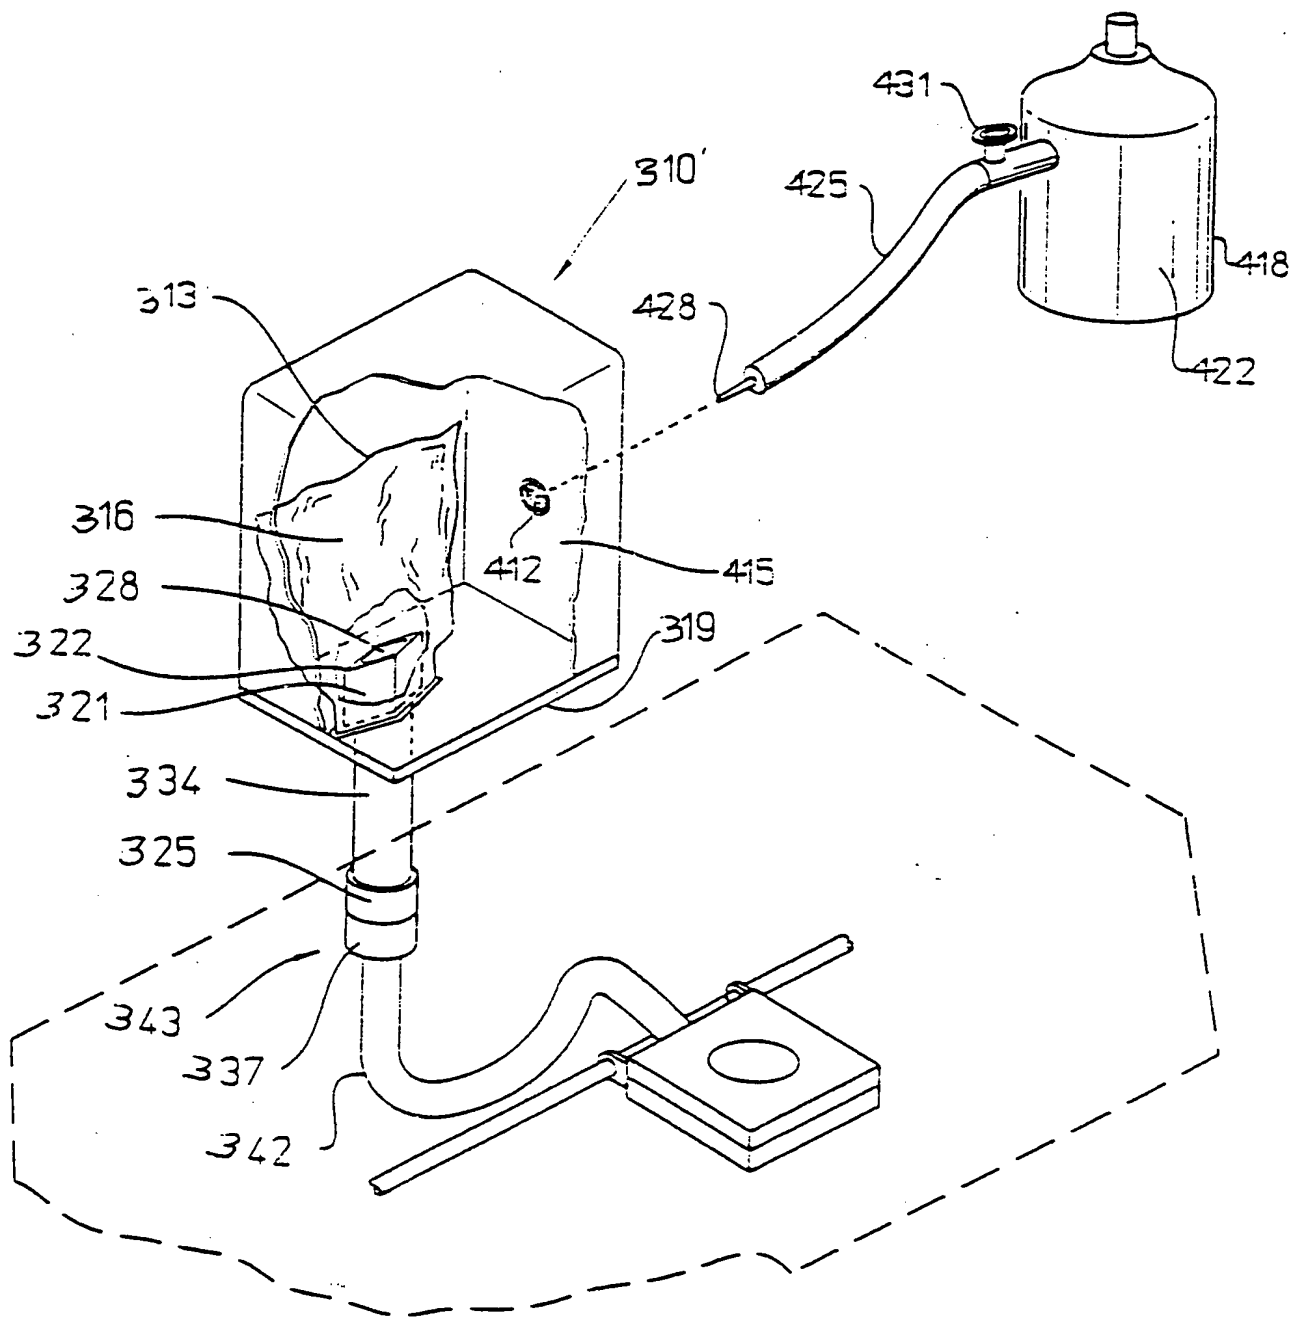 


Figure 1B

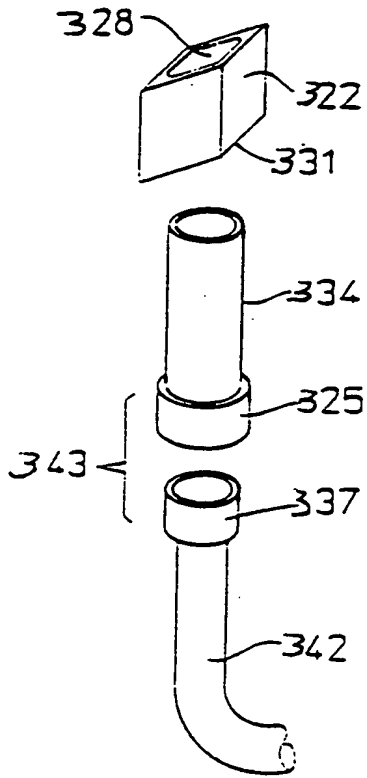 


Figure 2A

310

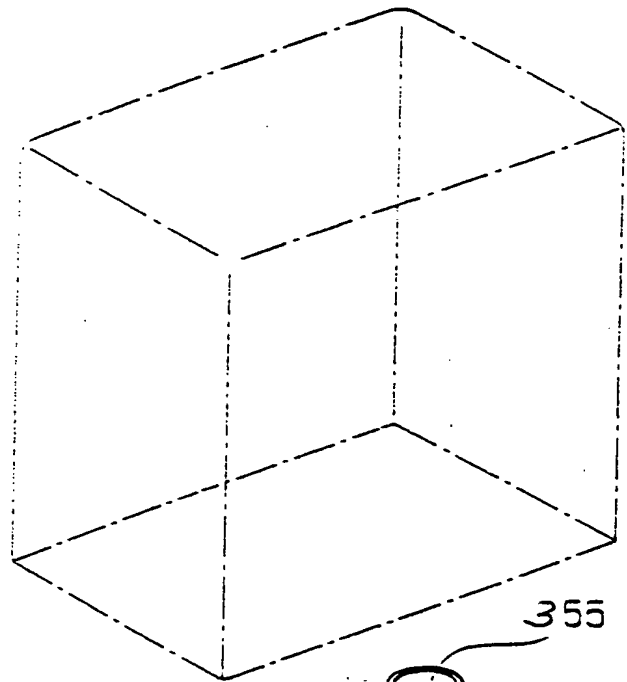
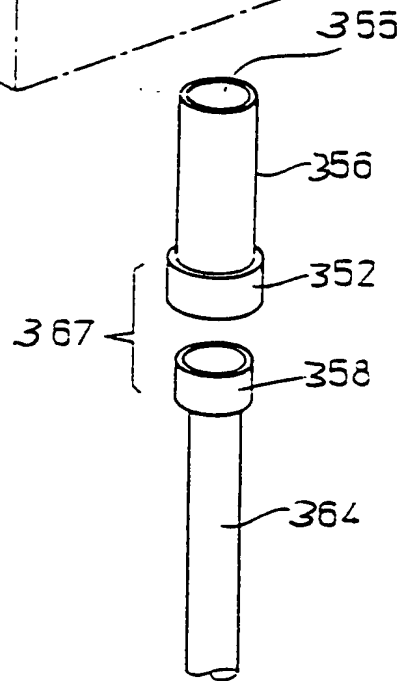 


Figure 2B

 

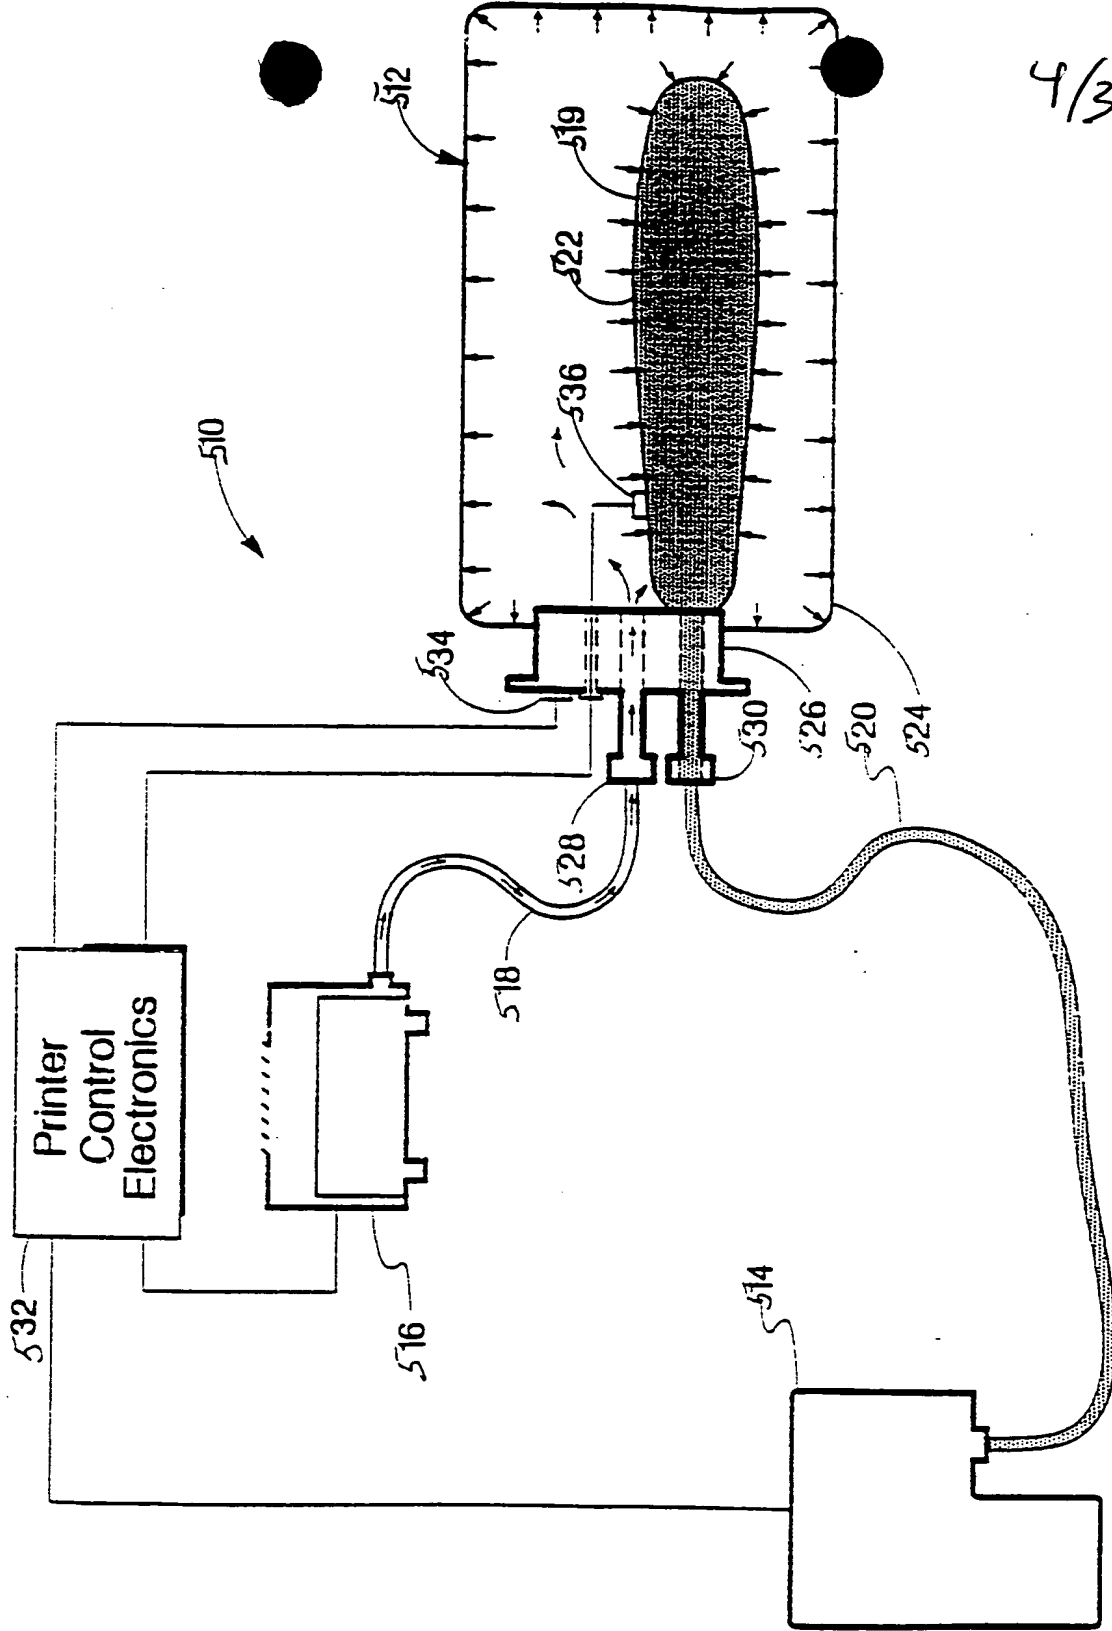 


FIG. 3

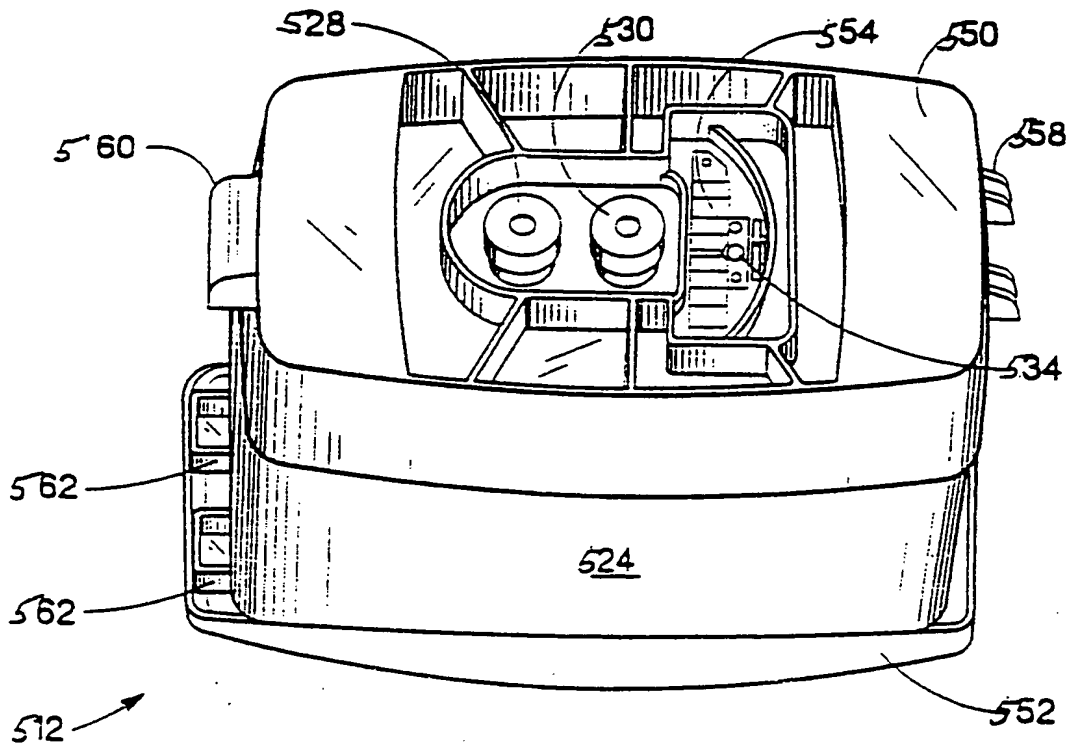 


FIG. 4A

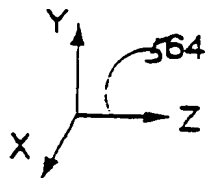
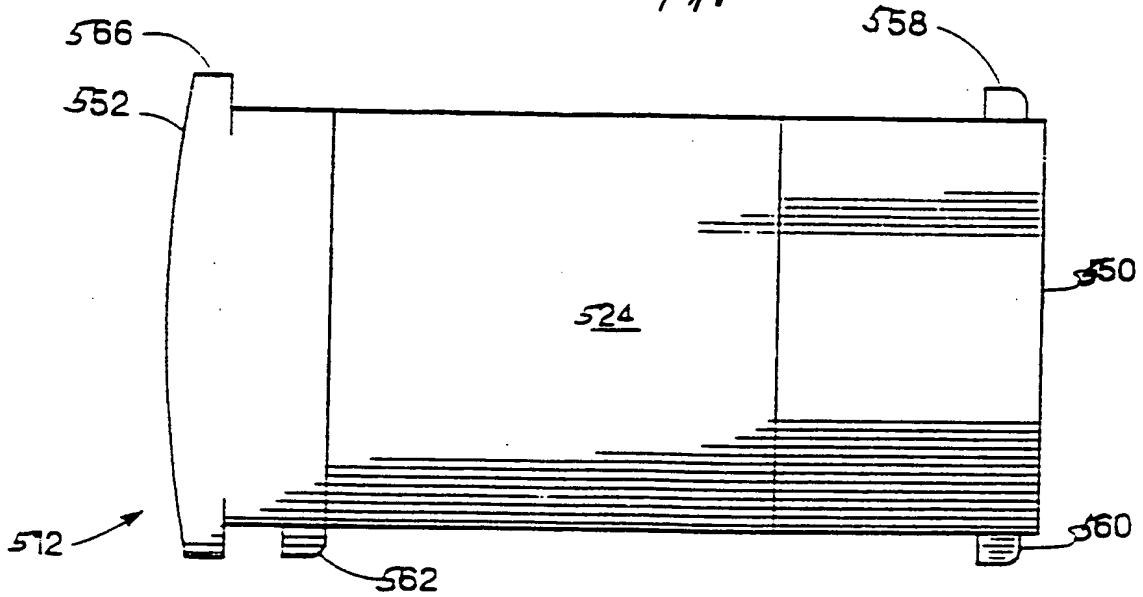 


FIG. 4B

 

FIG. 4C

7/30


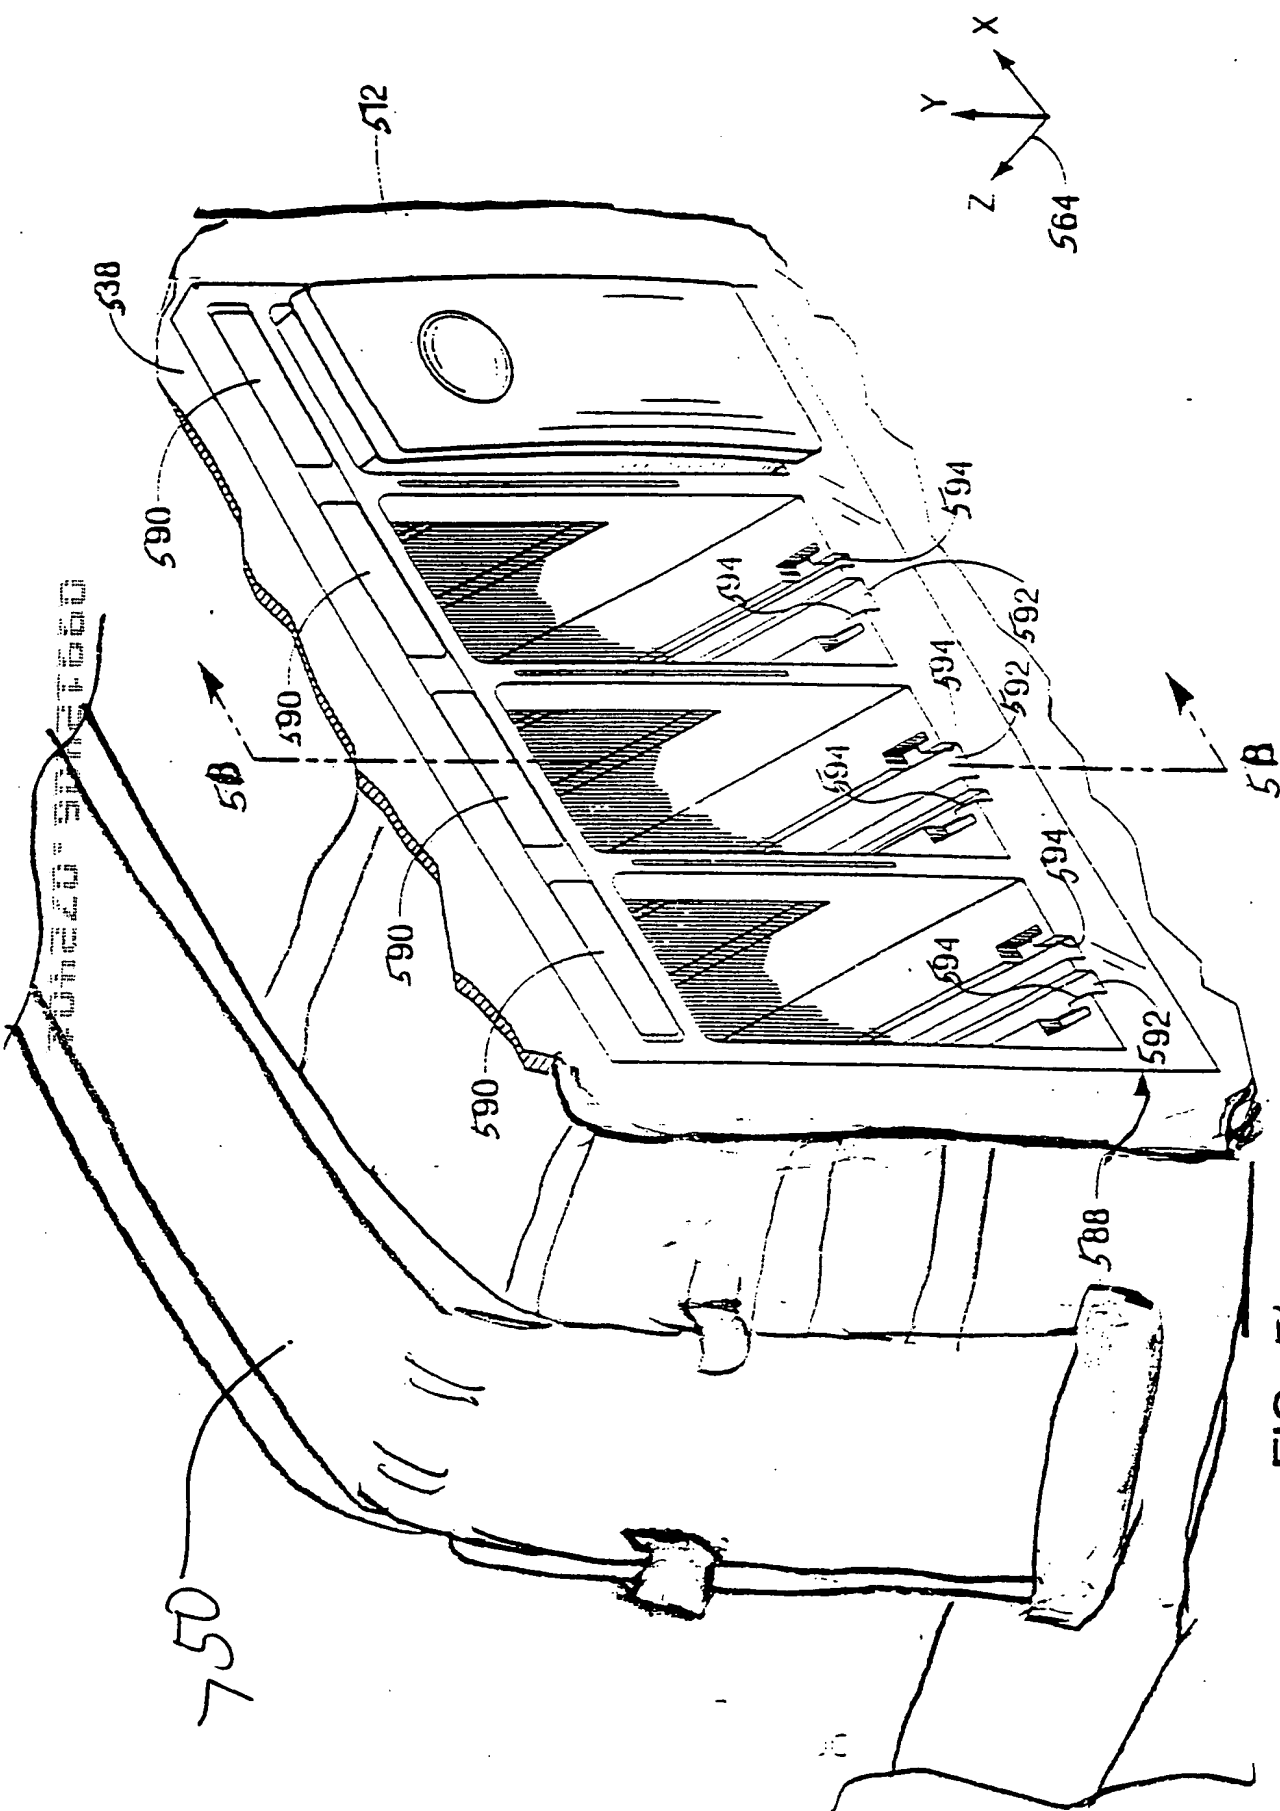 


FIG. 5A

 8/30

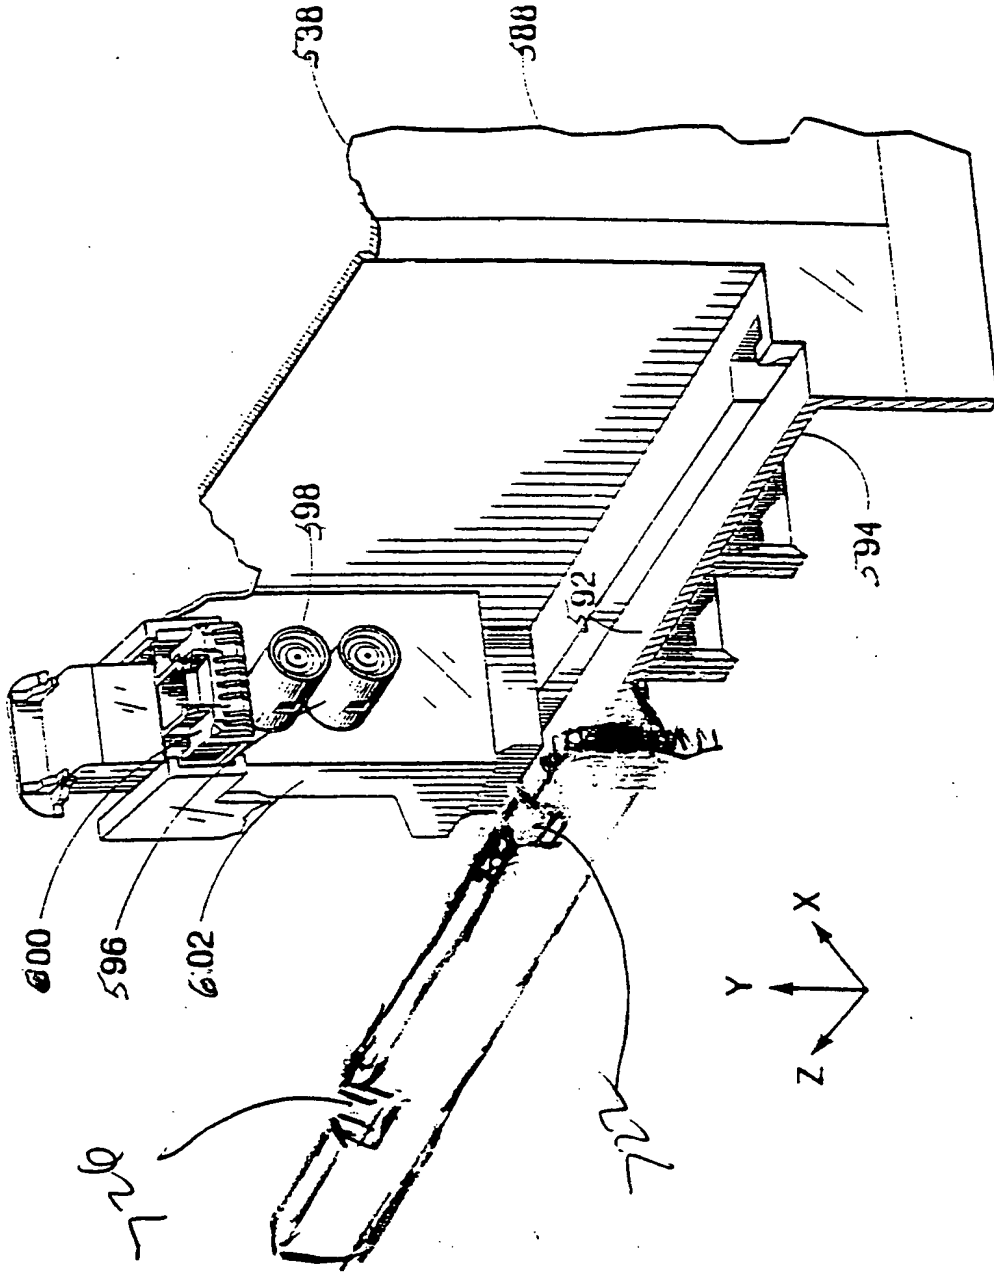

SECTION 5B--5B

FIG. 5B



1

[illegible]


 
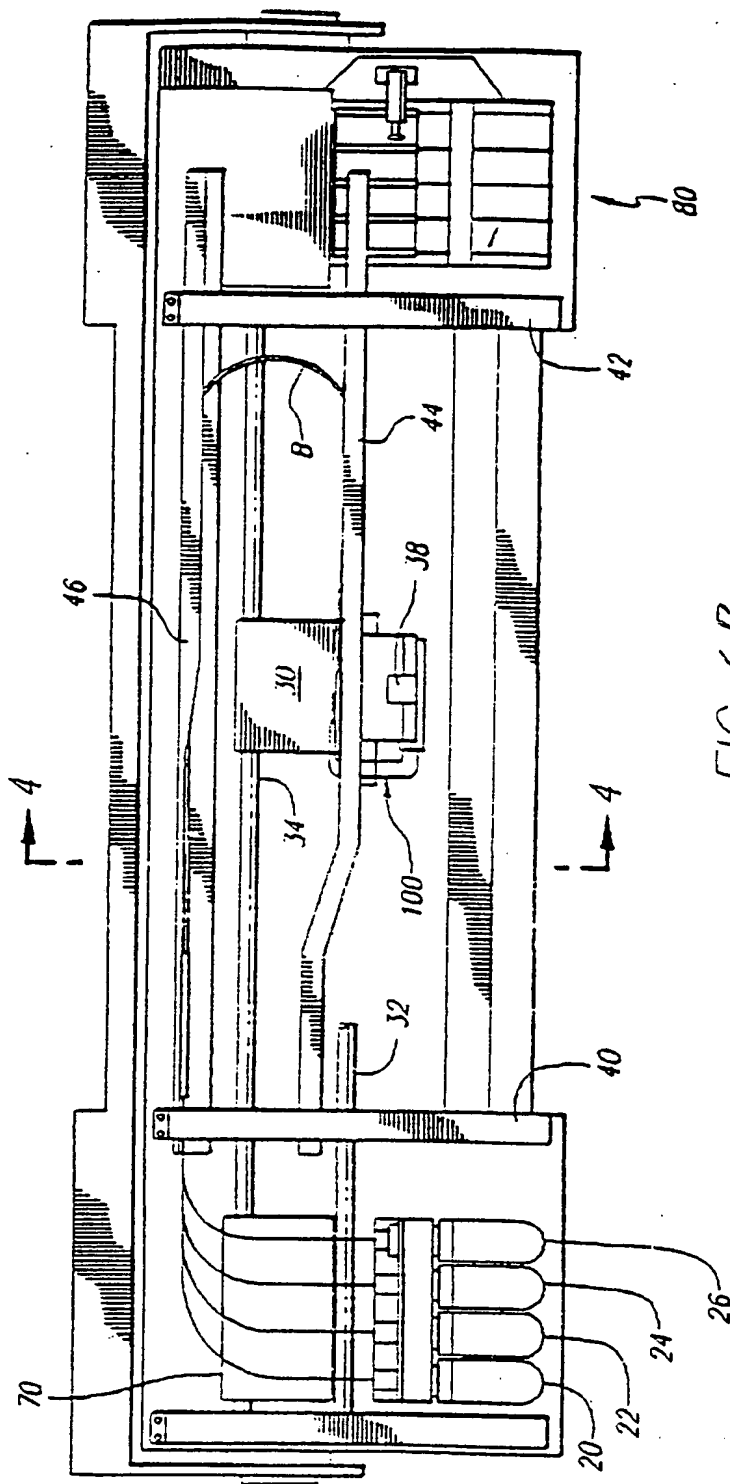 


FIG. 6B

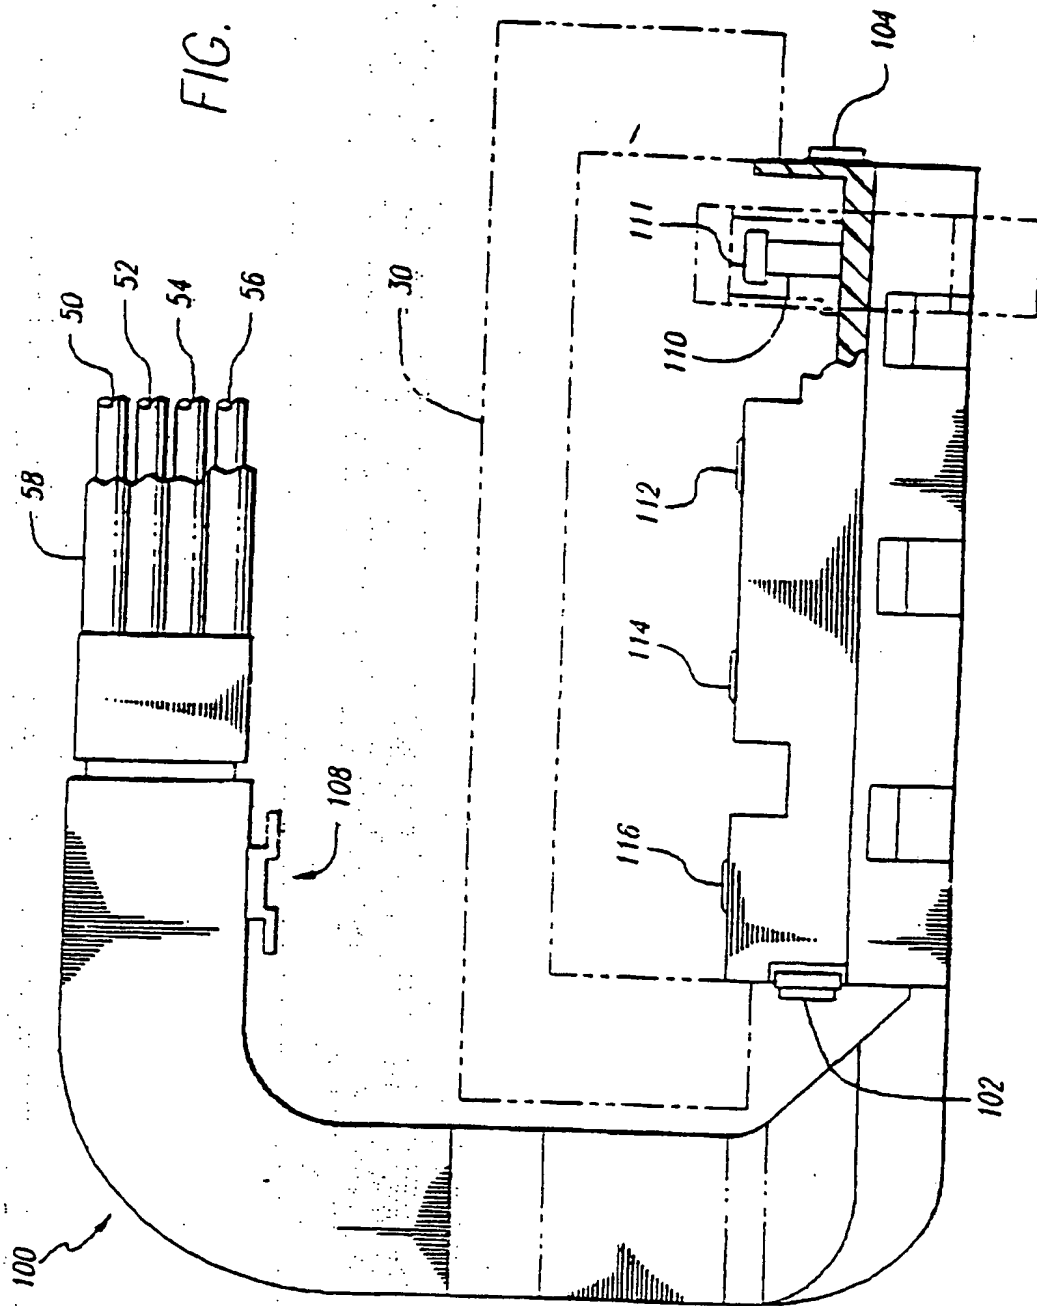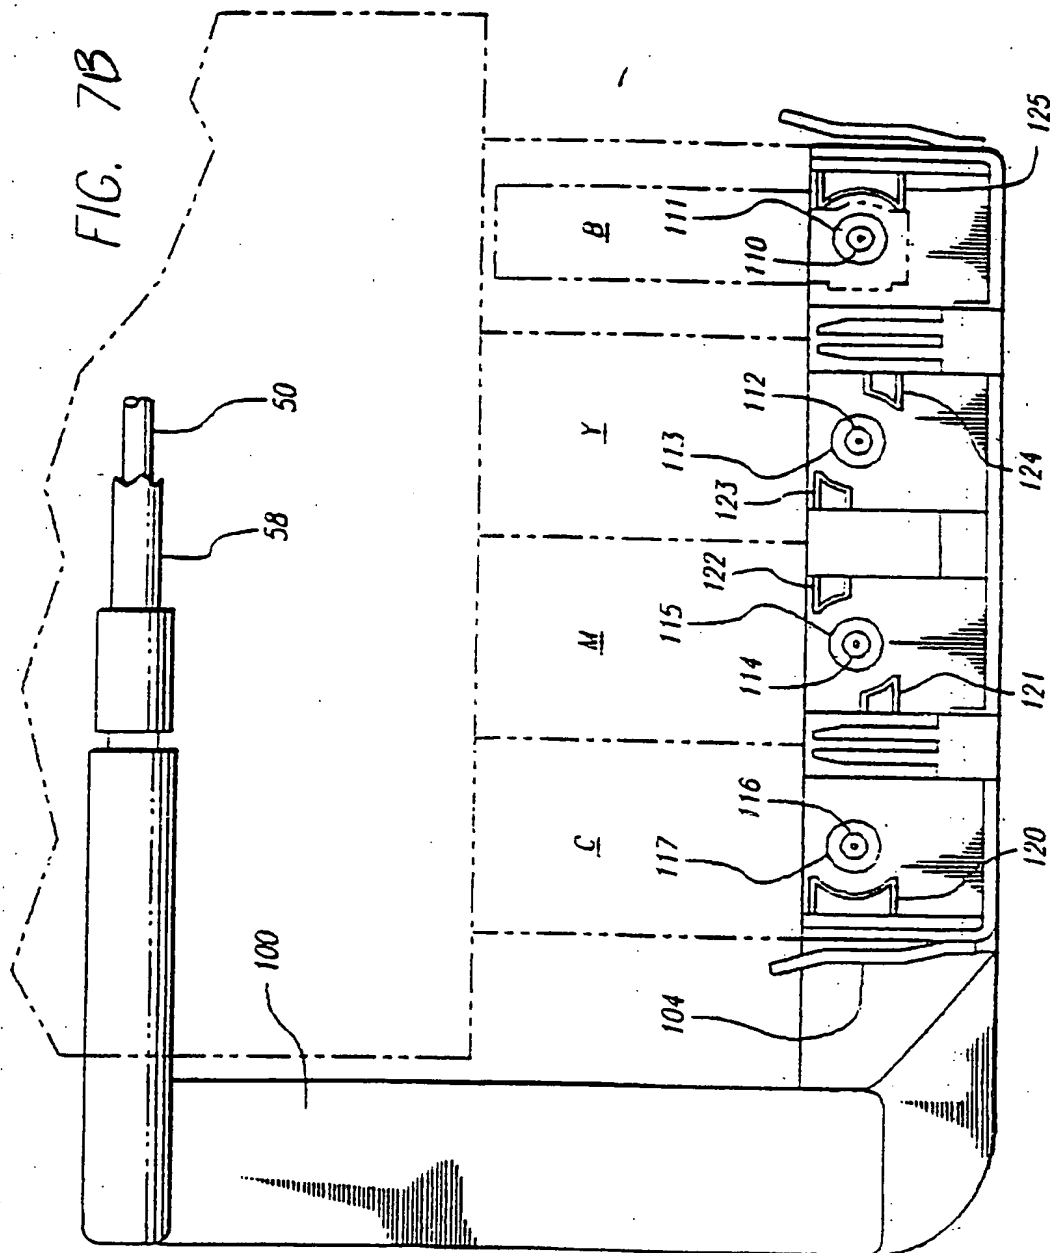 

[illegible]

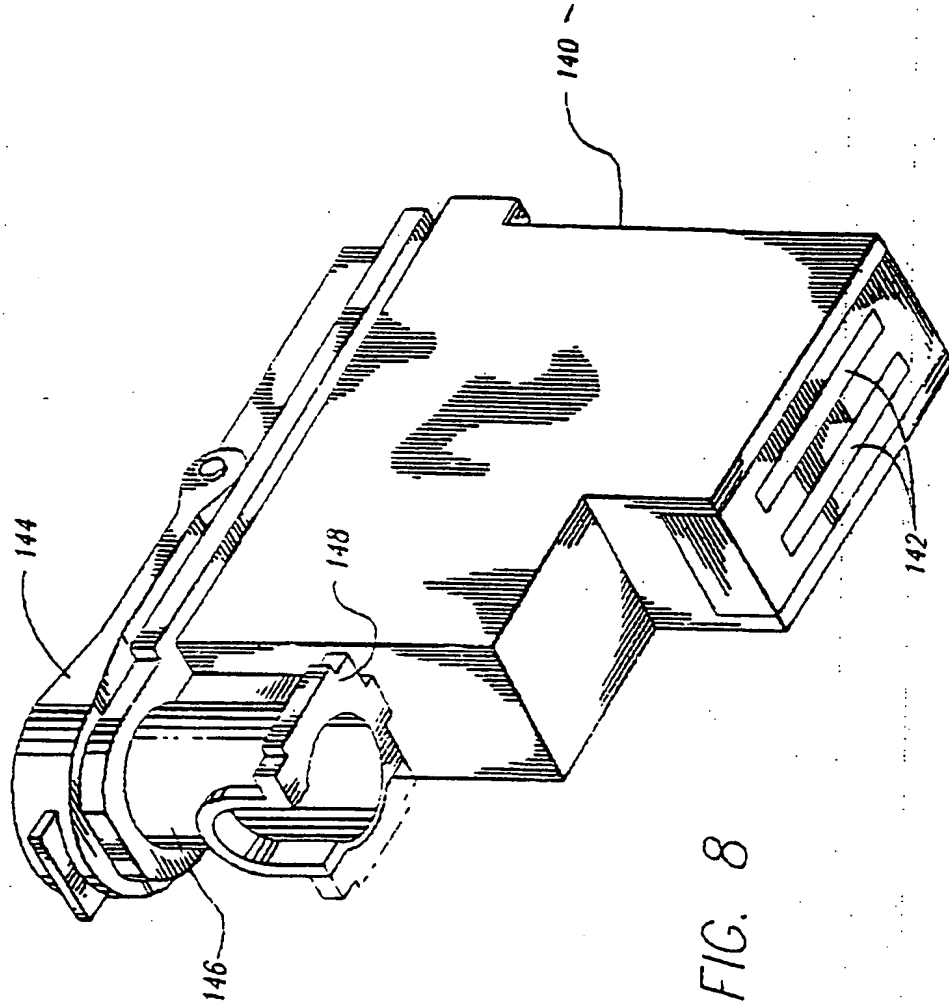
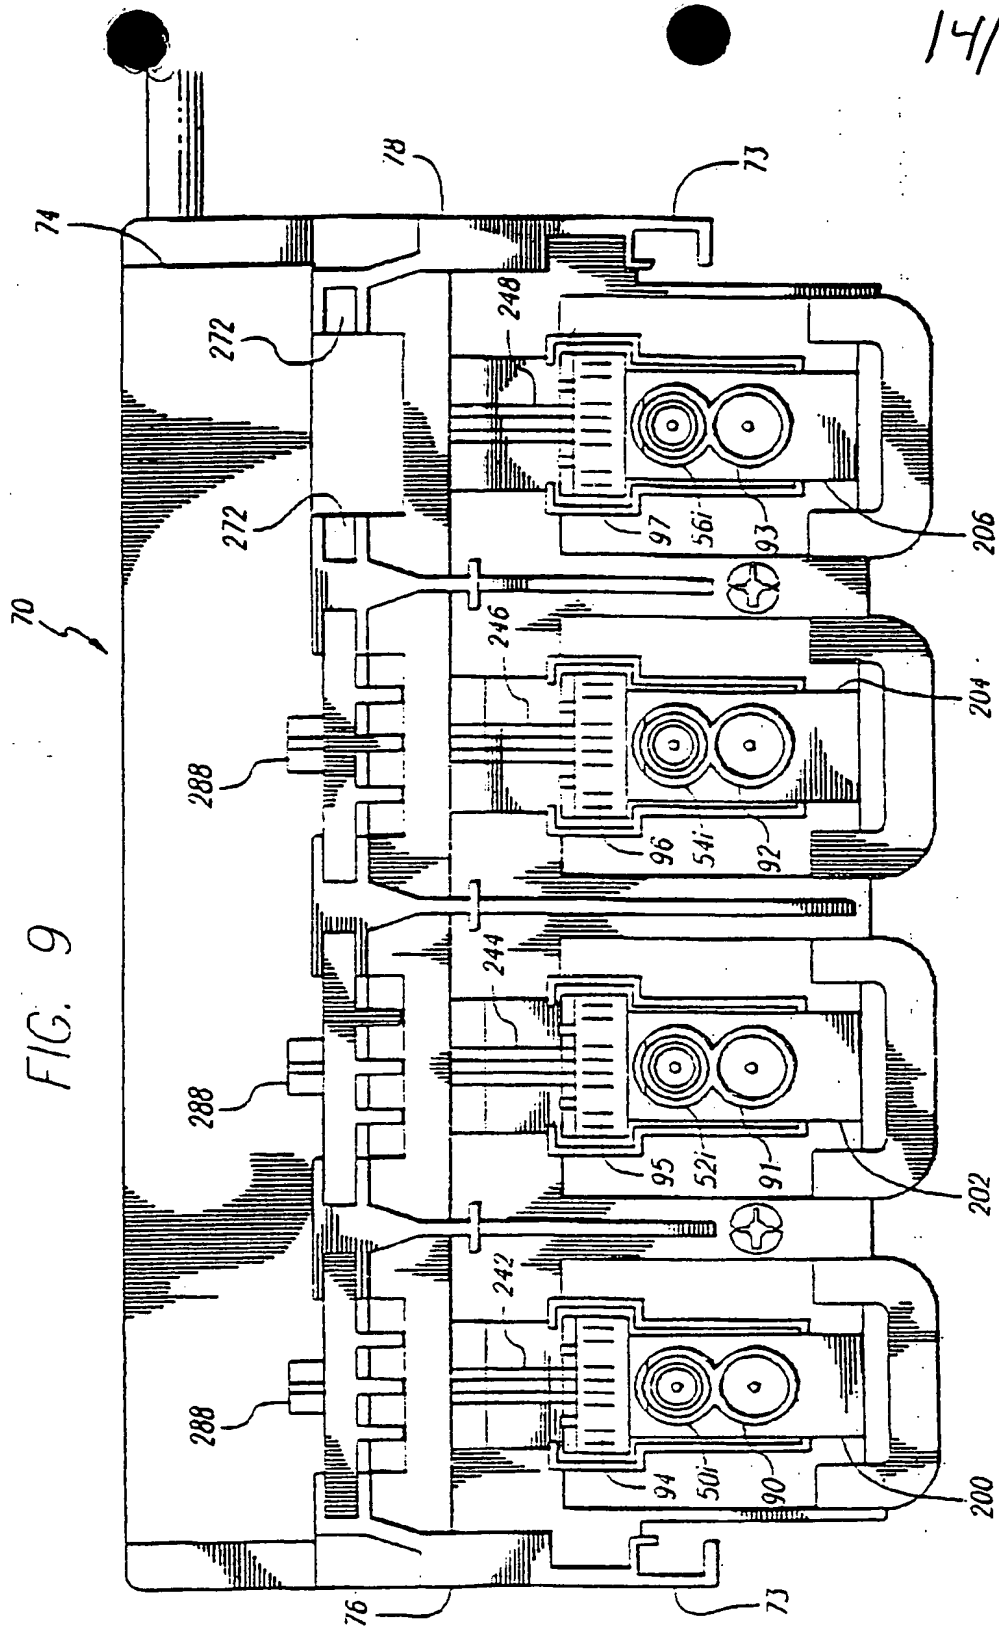 


FIG. 8

 


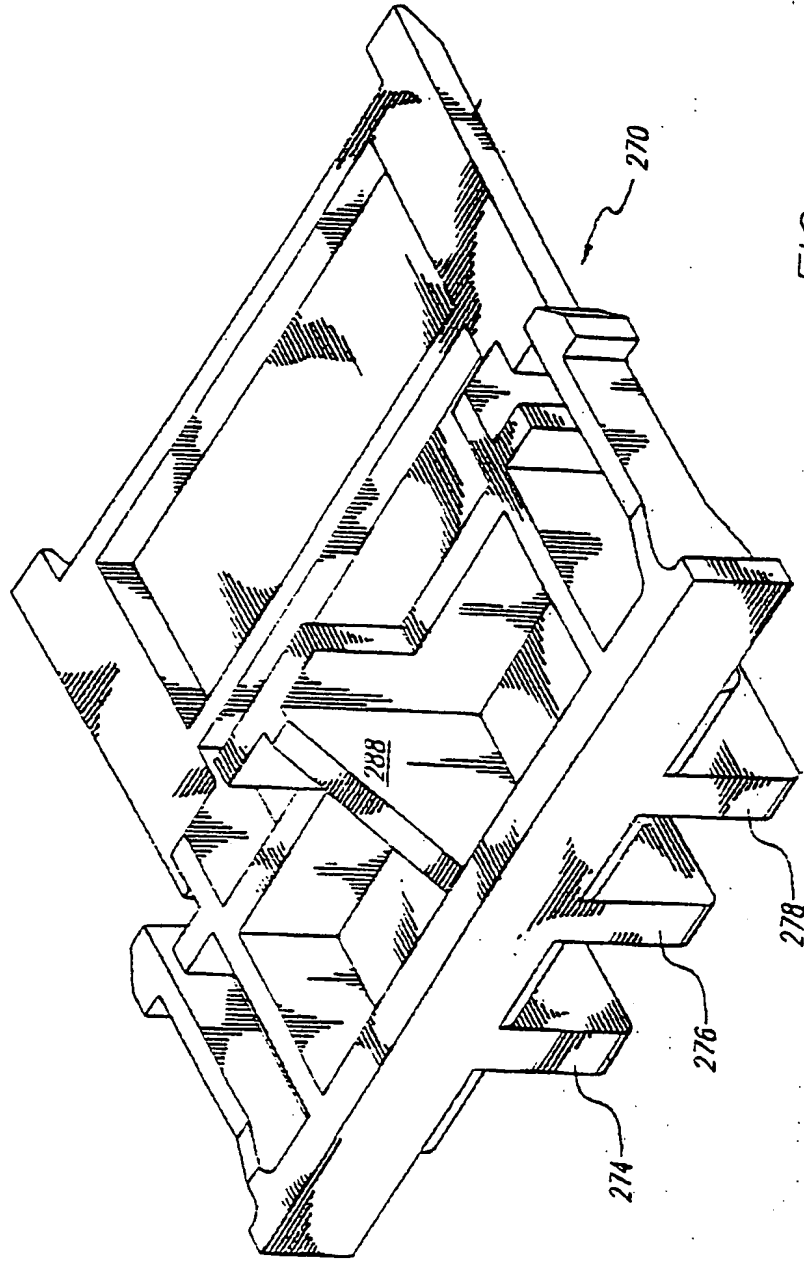 



FIG. 10

16/30

  FIG. 11



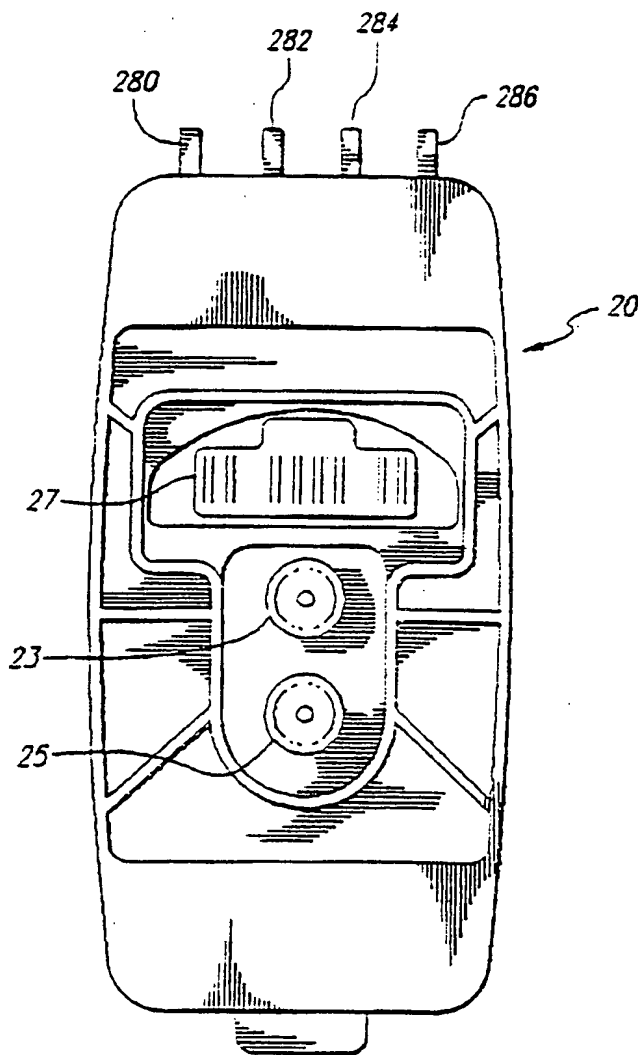



18/30

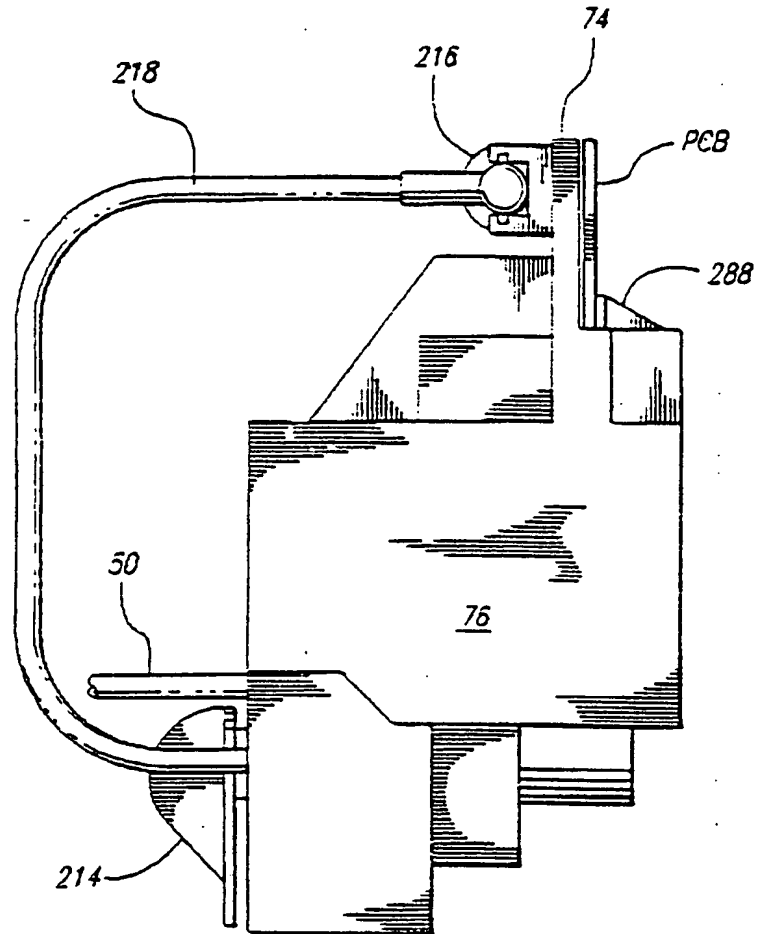 


FIG. 13



20/30

FIG. 15

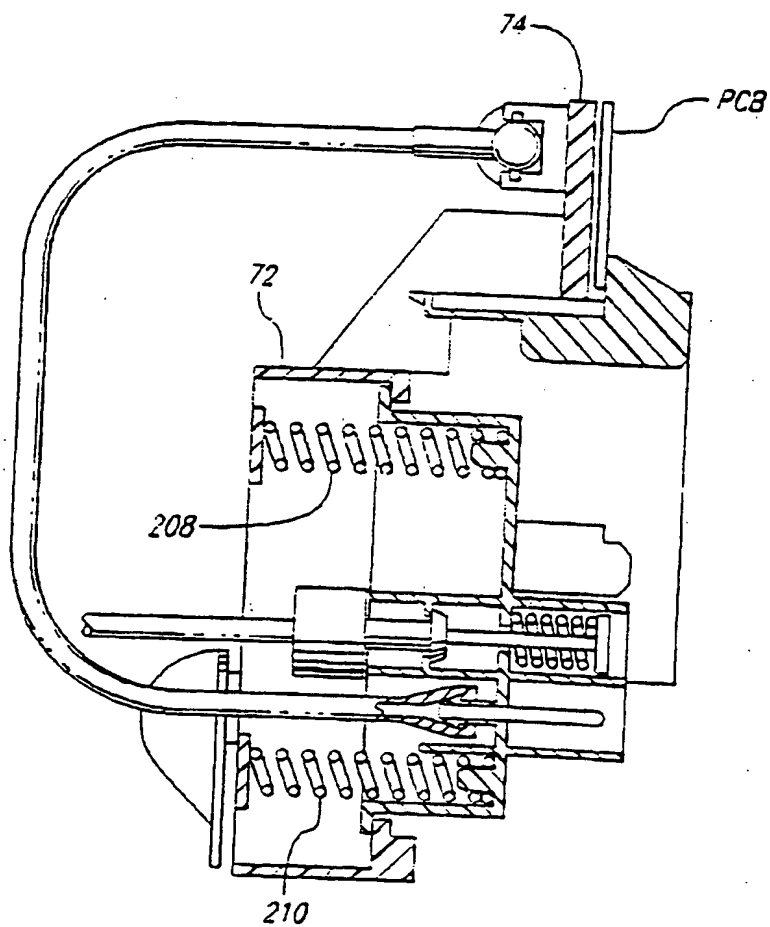 


FIG. 15

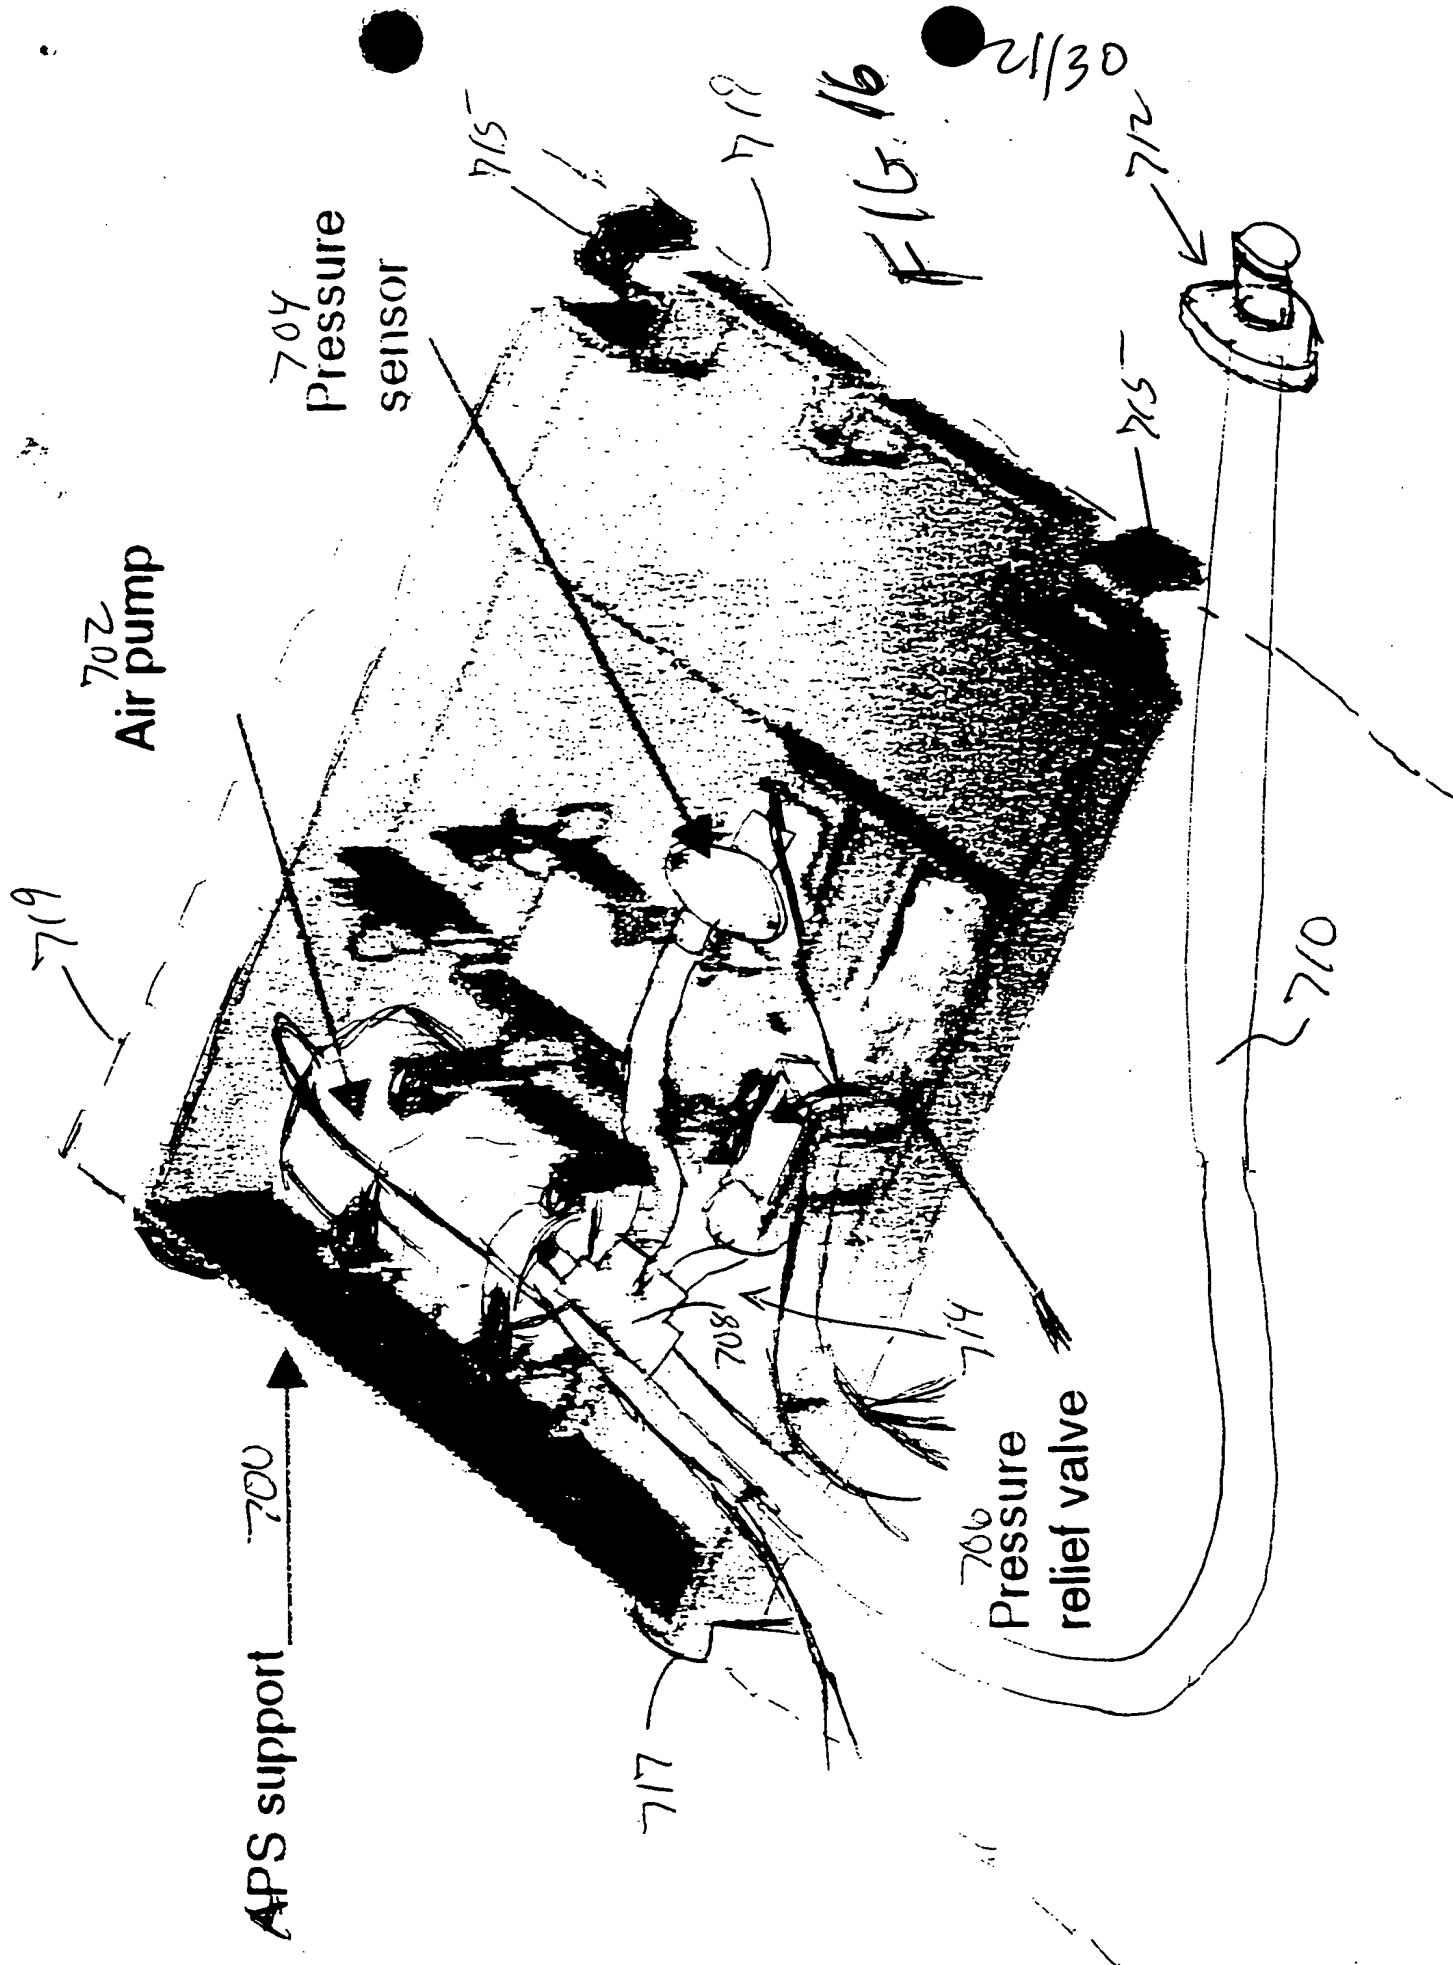 


FIG. 20 SHEET 60

22/30

FIG. 17

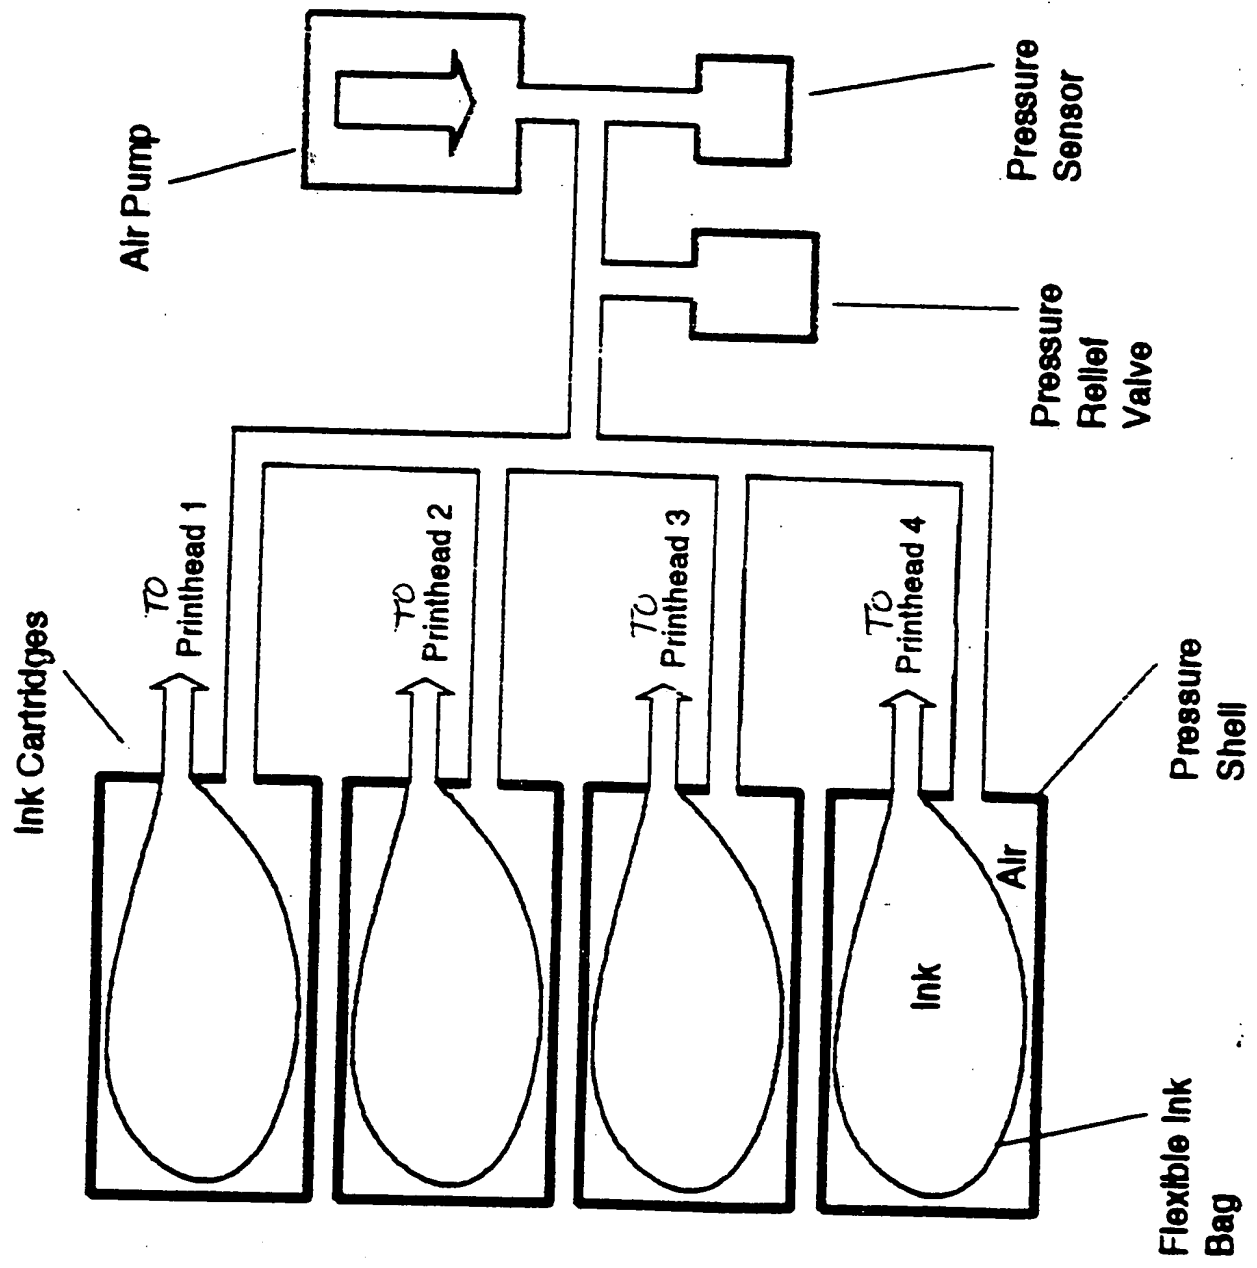 


FIG. 18A


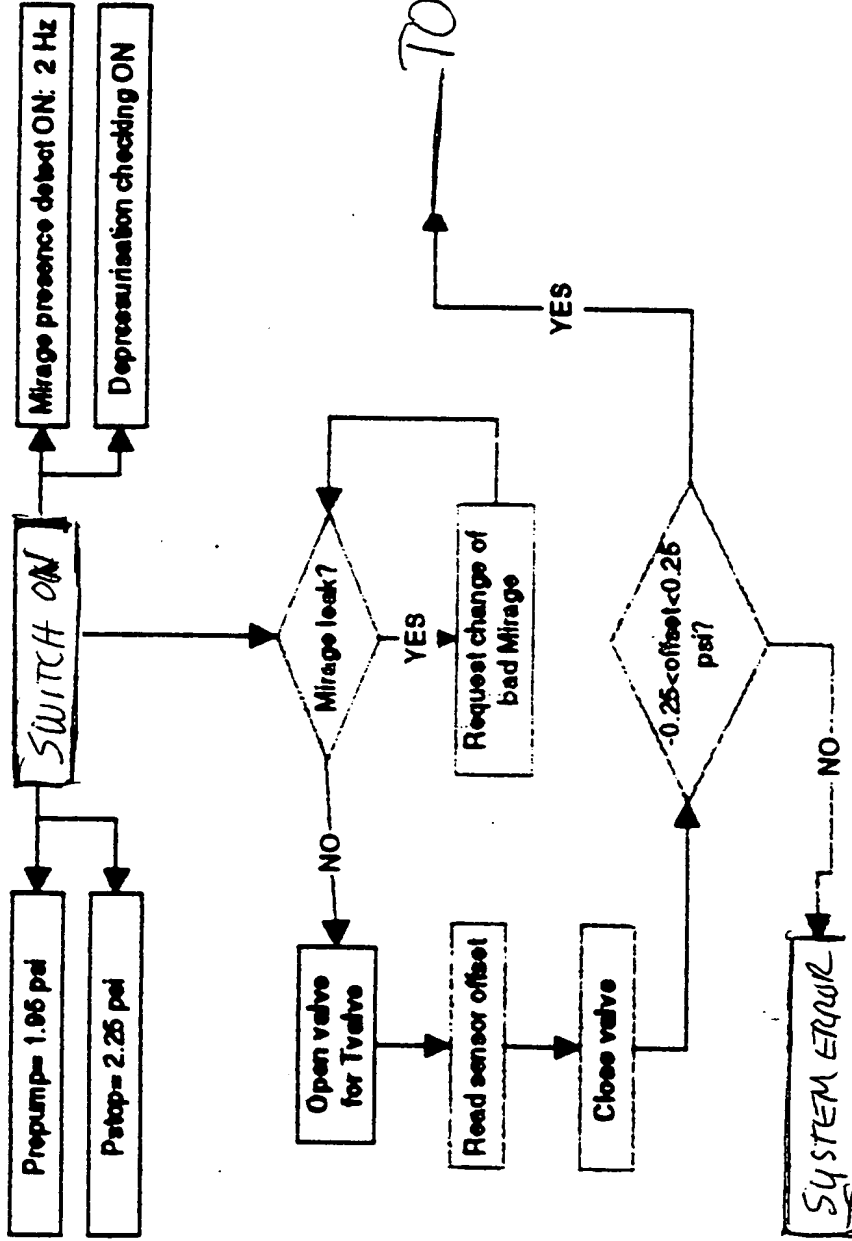 


FIG. 18B

23/30

FIG. 18B

 FROM  
FIG.  
18A

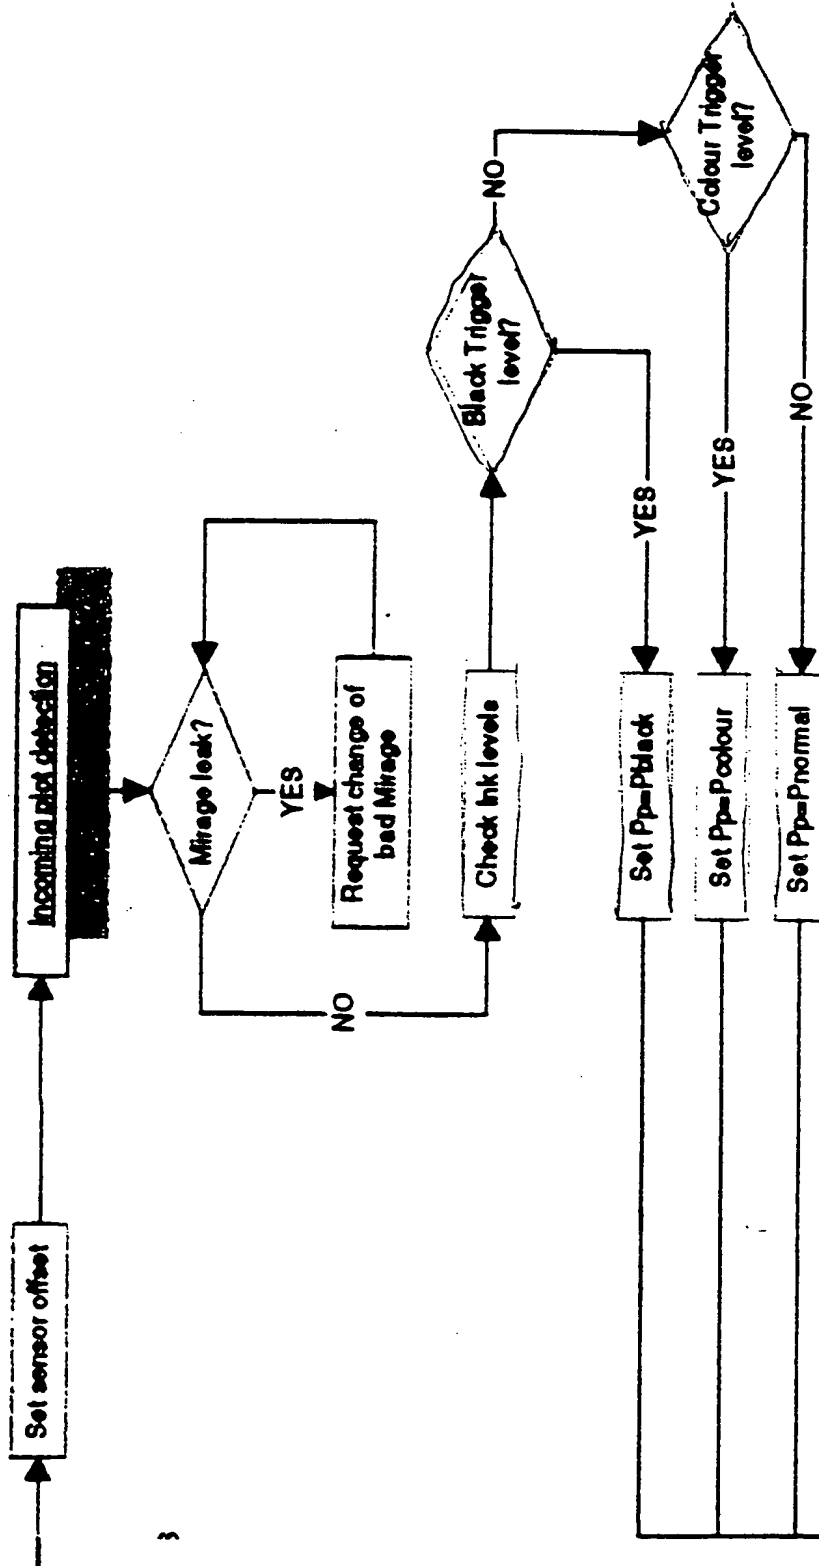


24/30

TO FIG. 18C



 
FROM FIG. 18B

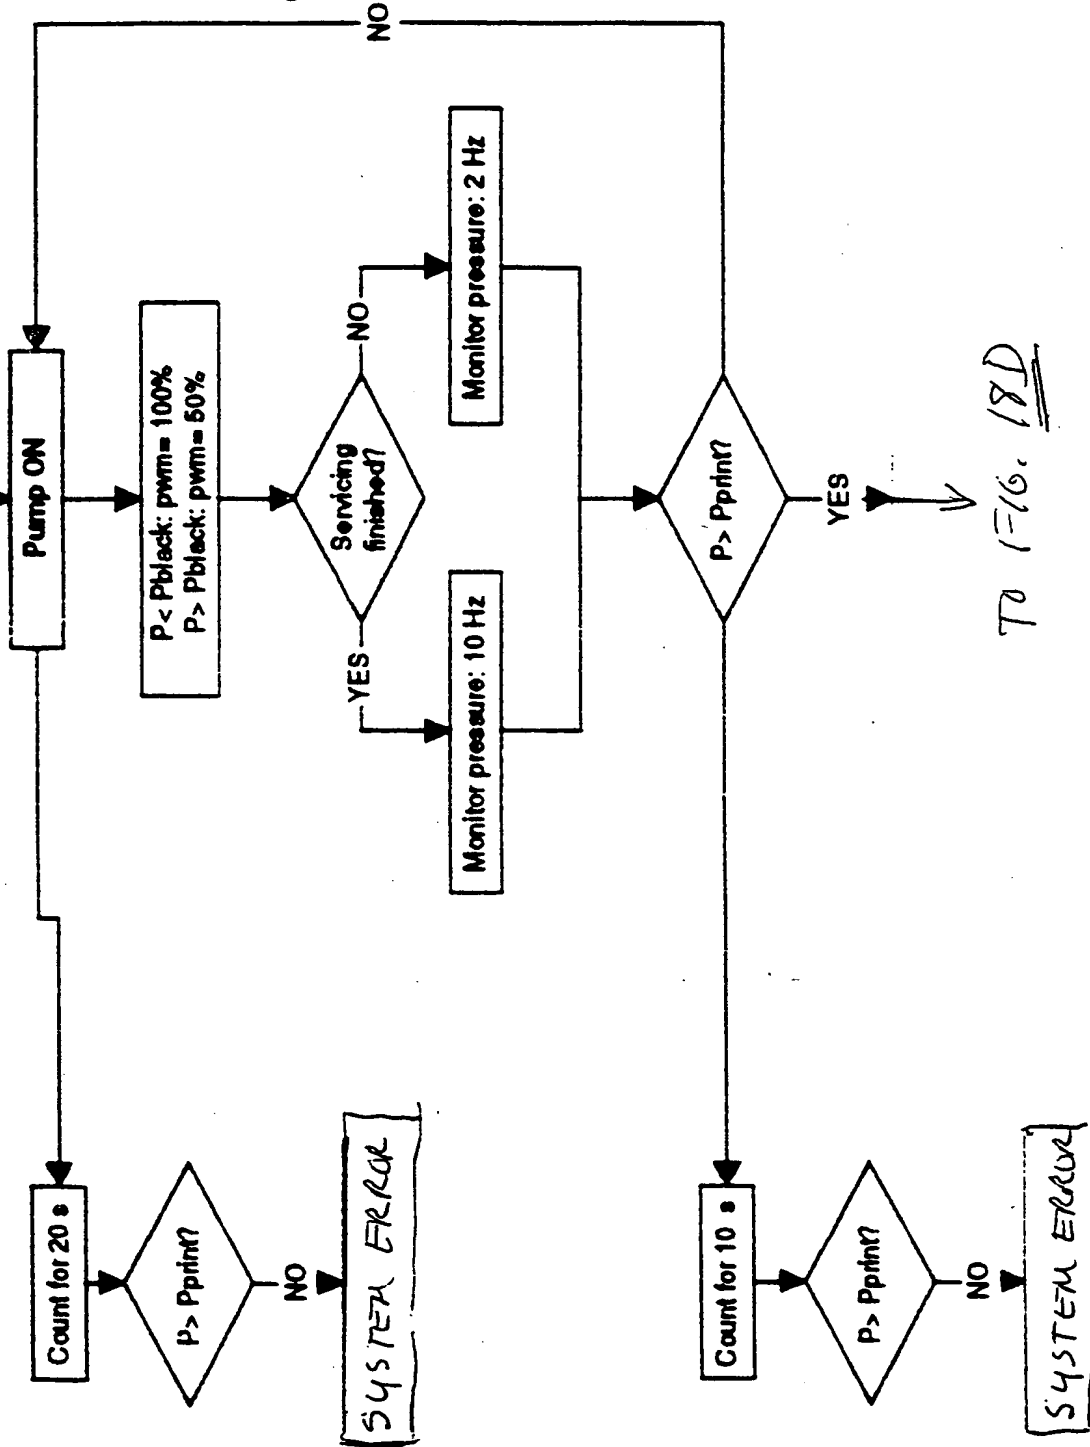

TO FIG. 18D

FROM FLG. 18C

 26/30

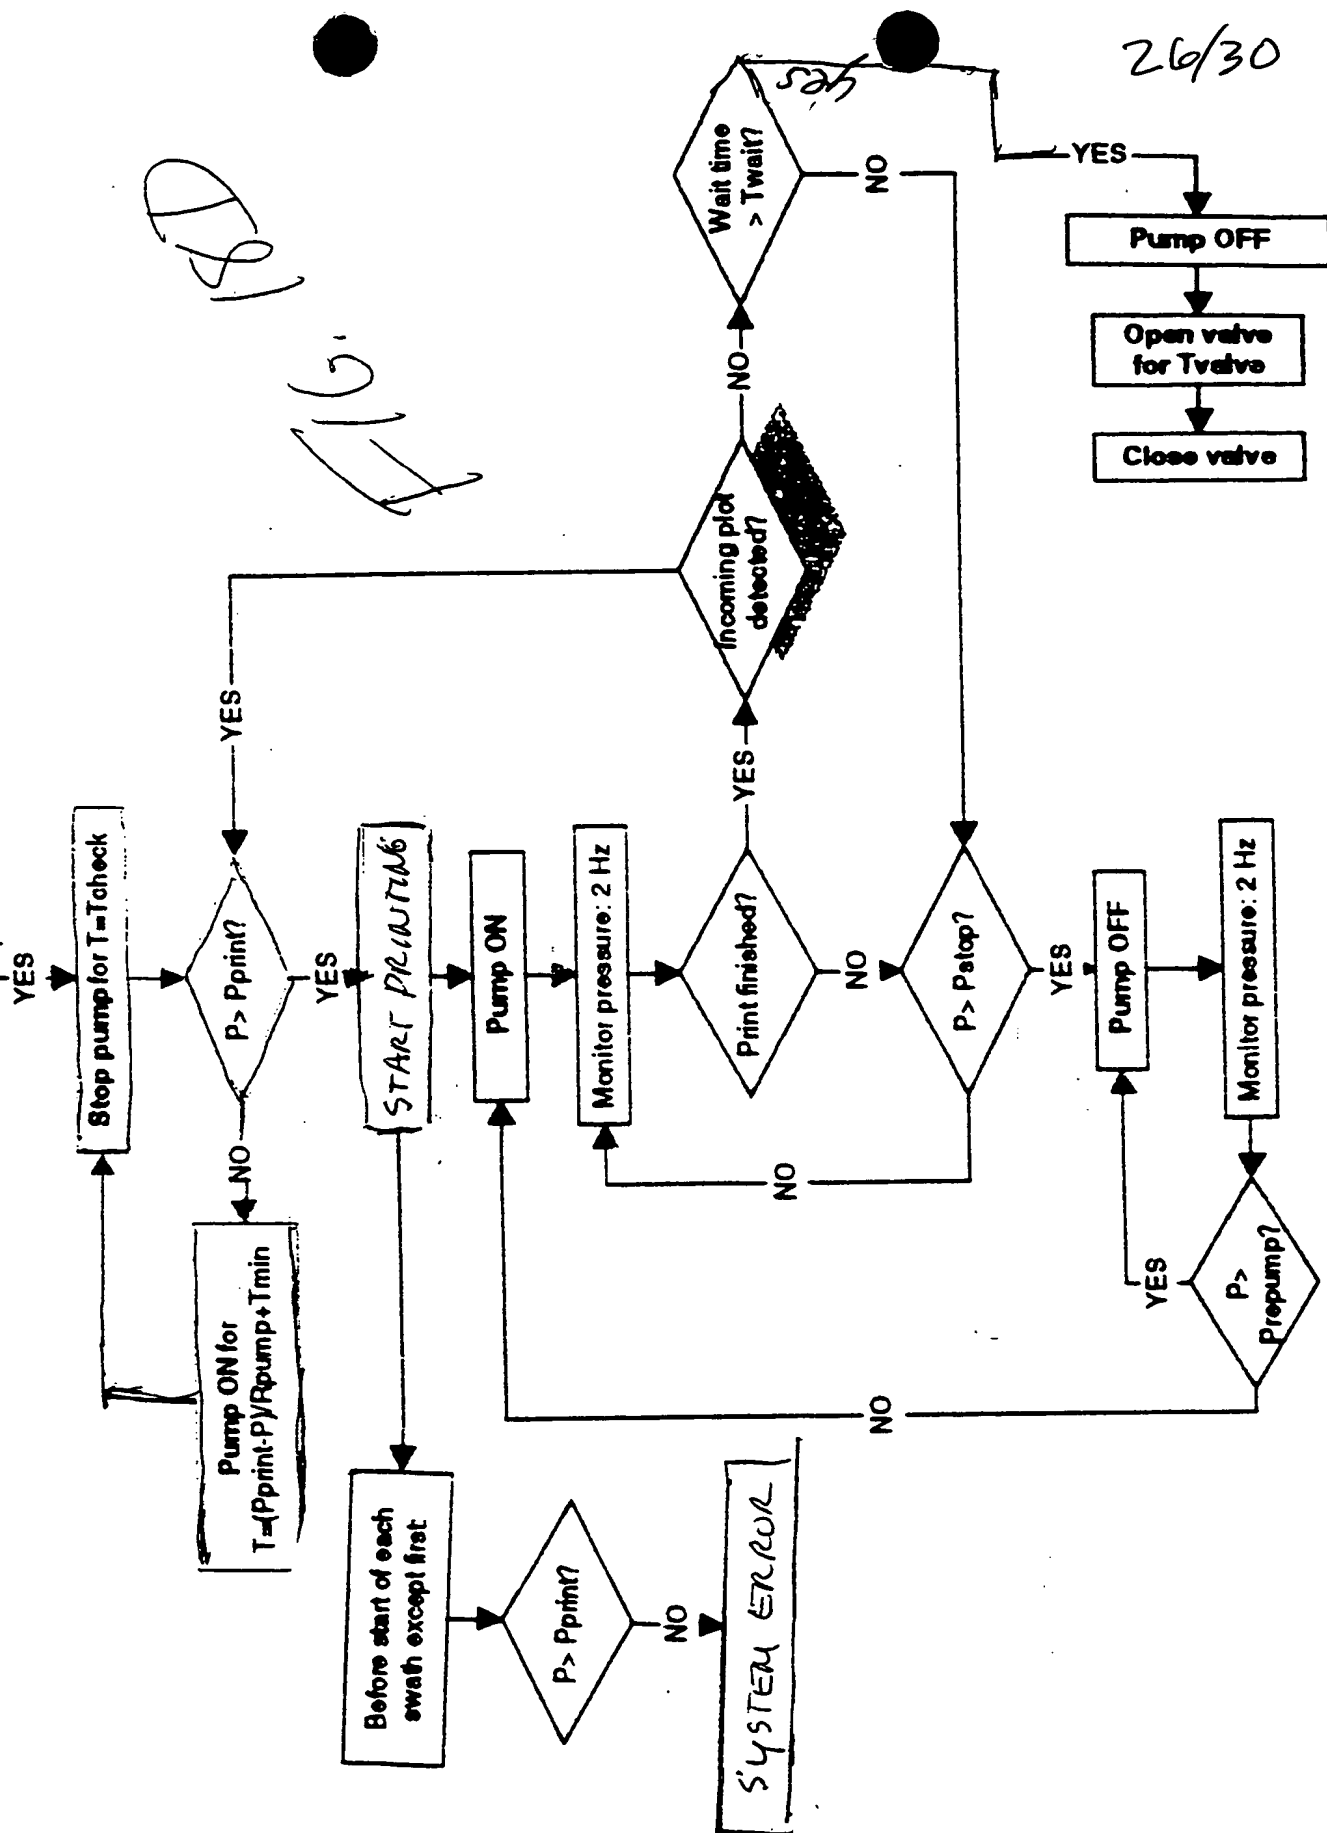


27/30

FIGURE 20-30

FIG. 19

### APS Duty Cycle

 
Pp (print pressure) is set at plot start as one of Pblack, Pcolor, Pnormal  
Above max print pressure pump runs at 50% PWM

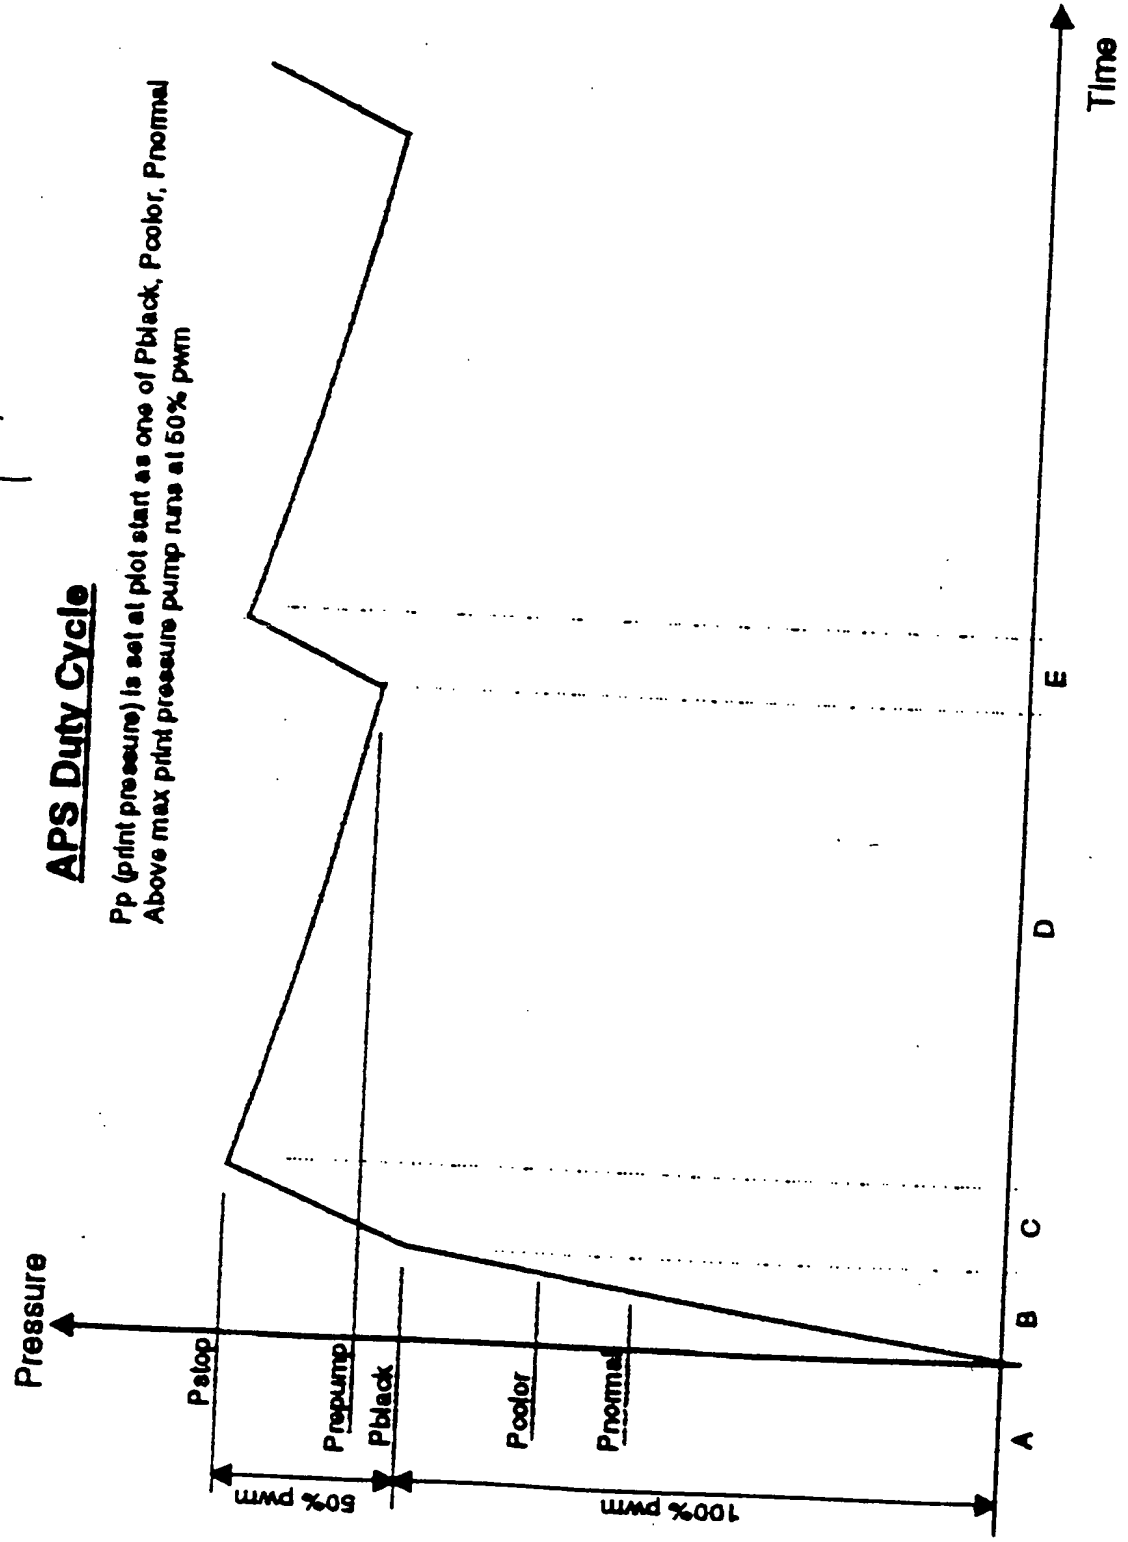

28/30

FIG. 20

 124

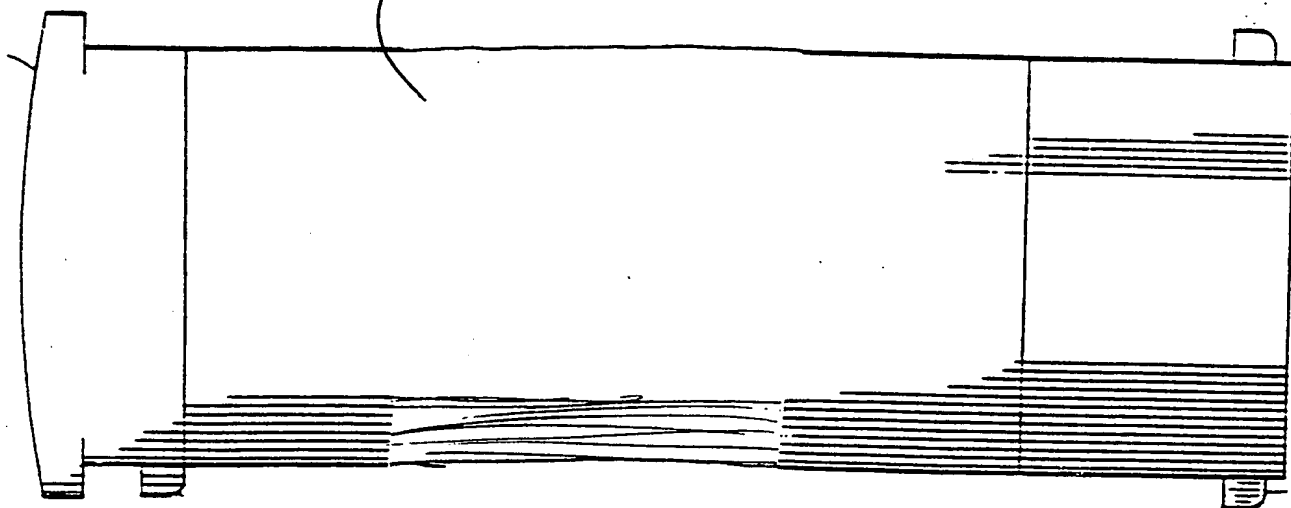

124

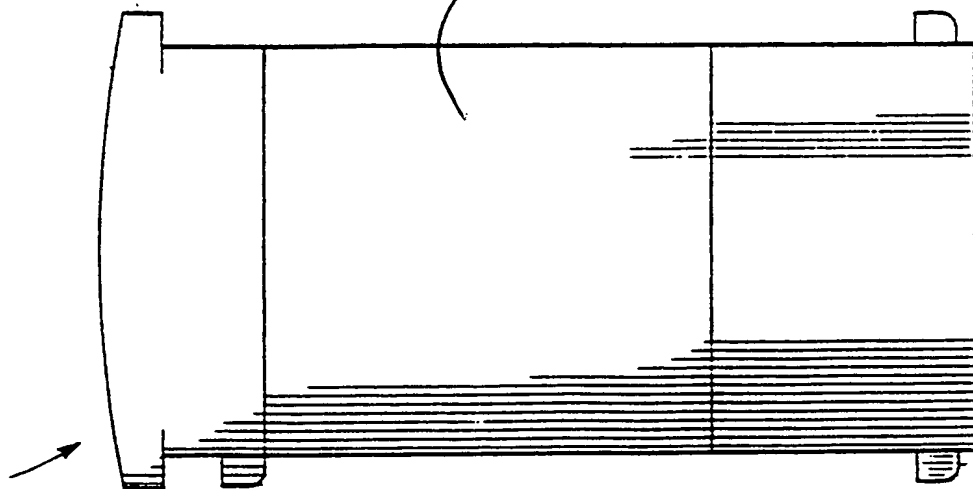 


FIG. 20

FIG. 20

FIG. 22

29/30

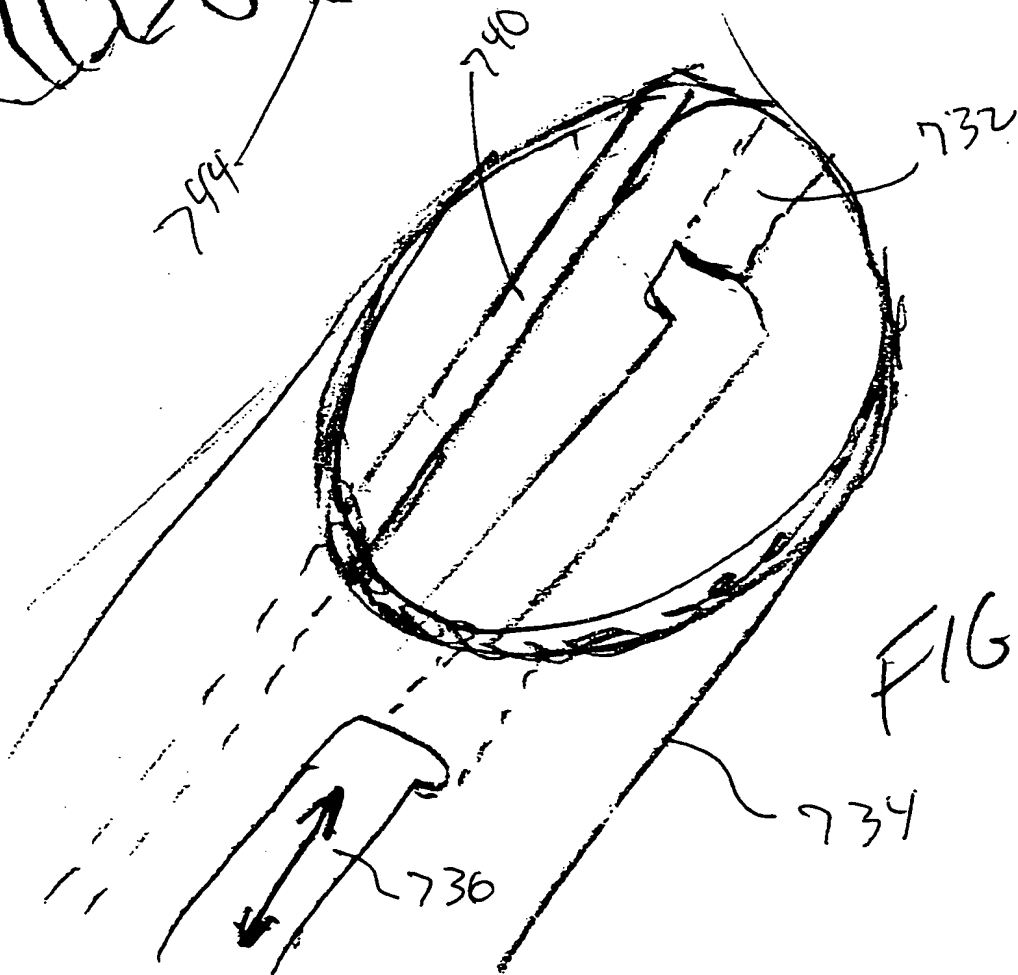 
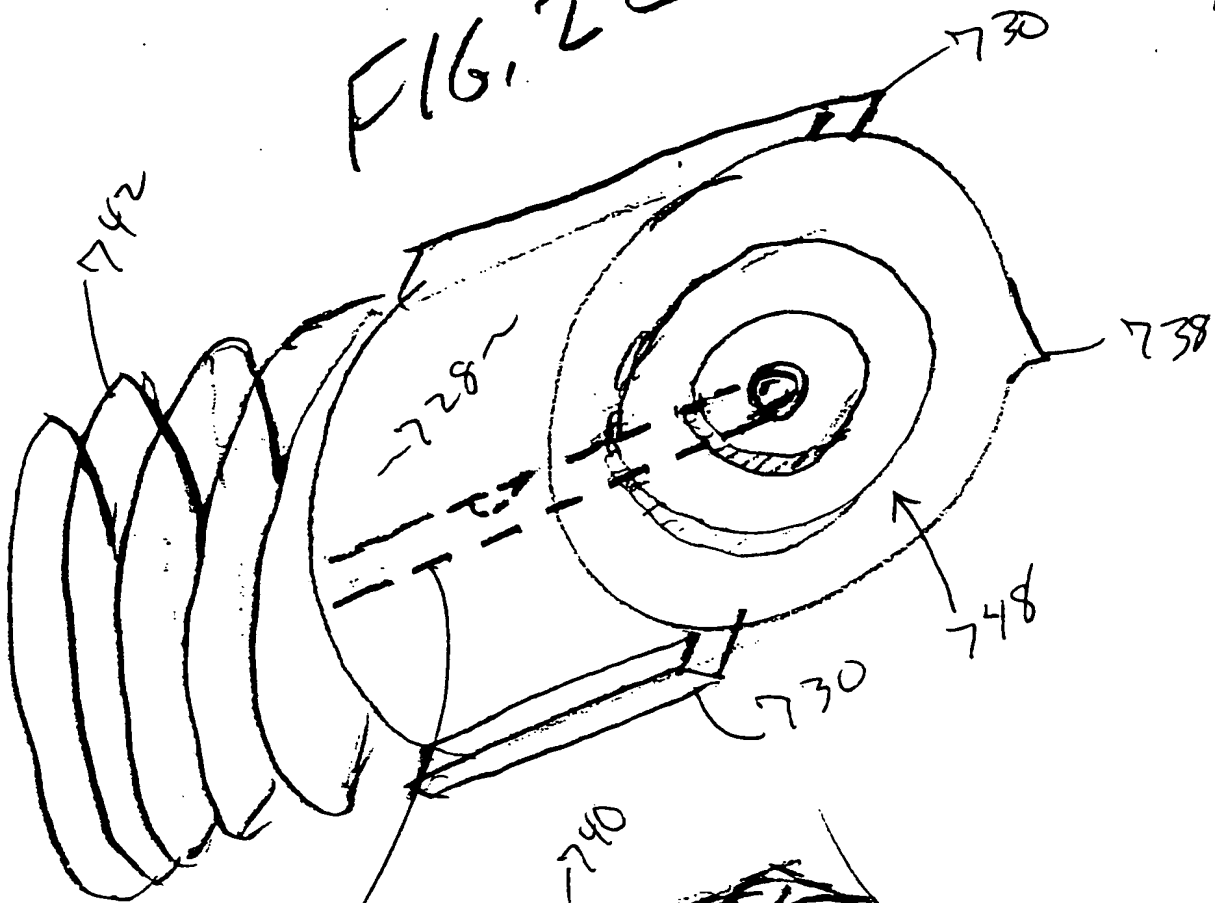 


FIG. 21

FIG. 23

30/30

OPERATING MODE	PRESSURE RELIEF VALVE	APPROXIMATE AIR PRESSURE
SYSTEM ERROR	OPEN	ZERO
NEW INK SYSTEM INSTALLED - AIRPURGE FROM INK TUBES	OPEN $\Delta$ CLOSED	1.5 PSI
PRIME PRINTHEADS WITH POSITIVE INK PRESSURE	OPEN $\Delta$ CLOSED	2 PSI
REPLACE PRINTHEAD	OPEN	ZERO
REPLACE INK CARTRIDGE	OPEN	ZERO
NORMAL PRINTING	CLOSED	2.5 PSI
OVERNIGHT NON-USE	OPEN	ZERO